


GB

WOODEN SOLAR WATCH

Art. No.: 23 881

INSTRUCTION MANUAL

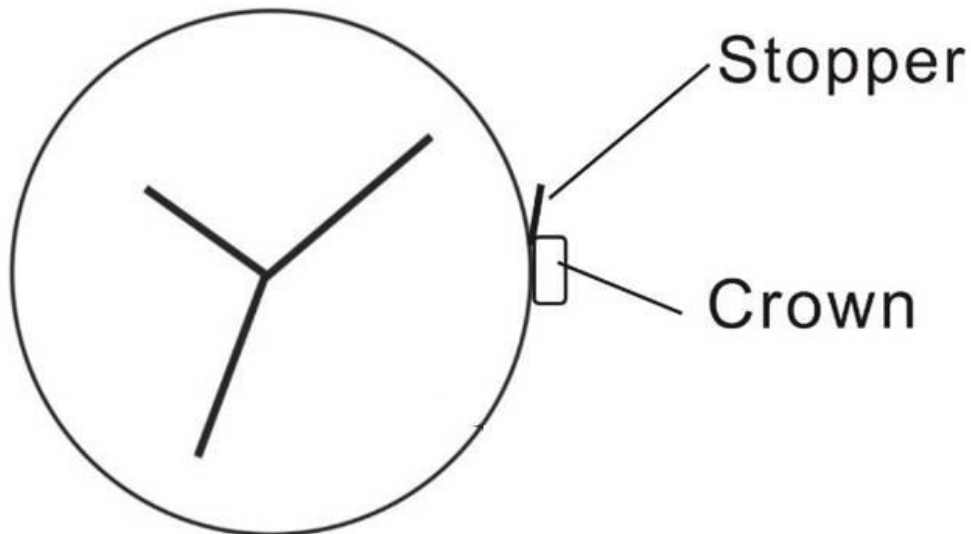

NOTICE:

To make your watch working, remove the stopper located between the watch and the crown. Set your desired time and **push back the crown**.

Time setting:

Pull out the crown, rotate it to the set time. When time is set, push back crown to start the time.

Charging the watch

When you start the watch or when the energy remaining in the battery is low, charge it sufficiently by exposing the watch to strong light.

Caution

- When charging, do not place it too close to a heat source to prevent overheating.
- When charging by sunlight, do not allow it to overheat such as on a car dash board.
- Make sure the watch temperature does not exceed 50°C while charging, to avoid damage.

Guidelines for charging time

(Dial transparency is 40%)

Reference for the illuminance of 1.000 Lux is 70 cm from under a 30 W fluorescent lamp.

Condition A: Time required for full charge

Condition B: Time required for steady operation

Condition C: Time required for 1 day's charge

Illumination (lux)	Source of light	Environment	Time required (approx.)		
			A	B	C
700	Fluorescent lamp	Inside office	-	45 hours	132 minutes
3,000		30w 20 cm	60 hours	4 hours	33 minutes
10,000	Sunlight	Cloudy	20 hours	1.5 hours	11 minutes
100,000		Fine weather	5 hours	15 minutes	2.5 minutes

The above table provides only general guidelines. When the watch is fully charged, it will continue to operate for about 2 months.

To prevent energy depletion

- Careful not to cover the watch when you wear it.
- When the watch is not in use, leave it in a brightly lit place for as long as possible.

Notes on power supply

This watch is provided with a rechargeable battery for exclusive use with the watch. **Never insert a conventional silver oxide battery in your watch as it may explode, generate intense heat or catch fire.** The watch is not designed to operate with such batteries.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an Environmentally friendly way by putting it in the appropriate recyclable waste collection containers.

Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 10.12. 2013