


23 949

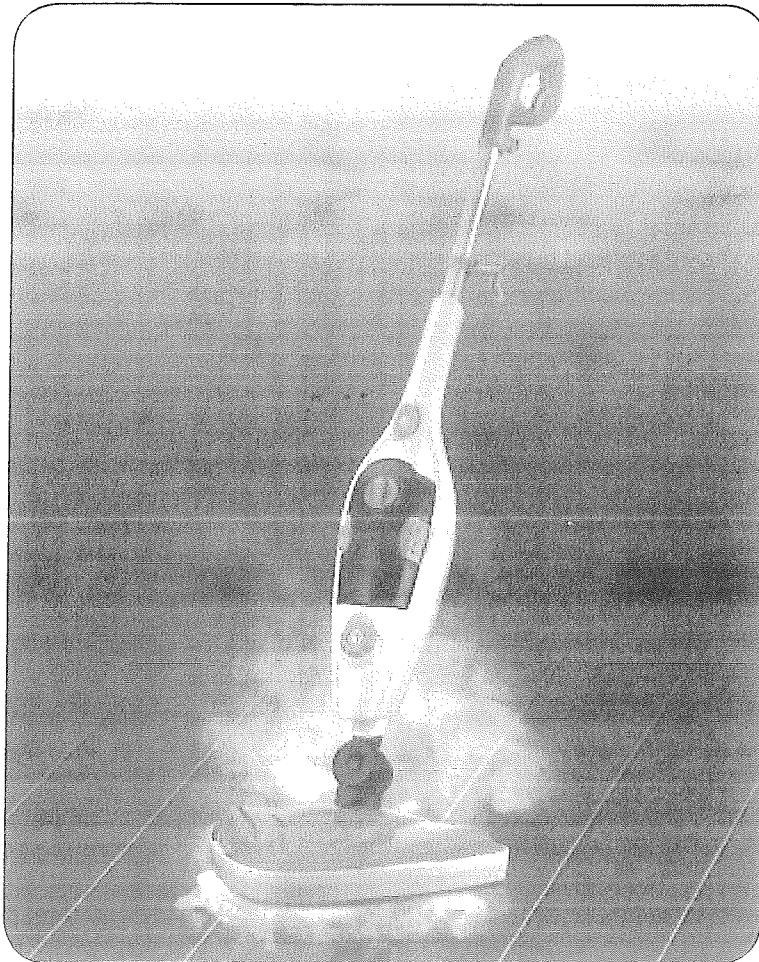

Gebrauchsanleitung

ab Seite 3

DE

Instruction manual

starting on page 16

GB

Mode d'emploi

à partir de la page 30

FR

Handleiding

vanaf pagina 44

NL

Contents

Meaning of symbols in these instructions _____	17
Safety instructions _____	17
Proper use _____	17
Risks of injury _____	17
Risk of electric shock and fire _____	18
Caution: Damage to the appliance and property _____	19
Warranty conditions _____	19
Product contents _____	20
Appliance overview _____	20
Appliance functions (nozzle functions) _____	21
Prior to first use _____	21
Assembling the appliance _____	22
Attaching/removing the cleaning head _____	22
Attaching/removing the nozzles _____	23
Attaching the floor pad and carpet cleaning head _____	23
Filling the water tank _____	23
Use _____	24
Cleaning the floor _____	24
Use as a handheld steam cleaner _____	25
After use _____	26
Cleaning and care _____	26
Storage _____	27
Troubleshooting _____	27
Technical data _____	28
Disposal _____	28

Dear customer,

The comprehensive package of accessories makes this steam cleaner into a genuine jack of all trades. You can use it as a steam cleaner with a handlebar and triangular cleaning head for smooth floors and carpets or as a compact handheld appliance for difficult to reach areas.

We wish you plenty of enjoyment with your new steam cleaner.

If you have any questions, please contact customer service via our website:

www.service-shopping.de



Prior to using the appliance for the first time, please carefully read through the operating instructions and store them in a safe place. These instructions are to accompany the appliance when it is passed on to others. The manufacturer and importer assume no liability in the event the data in these instructions have not been observed!

As part of ongoing development, we reserve the right to alter product, packaging or enclosed documentation at any time.

Meaning of symbols in these instructions



All safety notices are marked with this symbol. Please carefully read through and obey the safety notices in order to avoid injury to persons and damage to property.



Tips and recommendations are marked with this symbol.



This appliance works with steam.

Safety instructions

Proper use

- The appliance is designed for cleaning heat-resistant surfaces. It is also suitable for cleaning laminate floors providing you follow the instructions below:
 - The laminate should be correctly laid and there should be no gaps or cracks into which moisture may penetrate.
 - Test the steam cleaner first on an unobtrusive area and check the laminate afterwards for ripples or moisture penetration.
 - If the surface shows no damage, the appliance can be used to clean the whole laminate floor.
- Consult a qualified professional as to whether your floor surfaces are suitable for being cleaned with the steam cleaner. Always perform test cleaning on a small area first.
- The device is not suitable for surfaces which are sensitive to heat or moisture such as wallpaper, velvet, silk, unsealed and/or waxed wooden surfaces, soft plastic, leather and cold glass (with outside temperatures of below 0 °C).
- The appliance is not intended to be used outdoors.
- The appliance is conceived for private use, not for commercial use. Only use the appliance as described in these instructions. Any other use is deemed improper.

- ATTENTION!** Improper use of the appliance may result in injury, scalding, and electrical shocks.



Risks of injury

- ATTENTION!** Danger of suffocation! Keep the packaging material away from children and animals.
- This appliance is not designed to be used by persons (including children) with impaired physical, sensory or mental abilities or those lacking experience and/or knowledge unless they are supervised by a person responsible for their safety or have received instructions on how to use the appliance from them. Children must be under supervision to ensure that they do not play with the appliance.
- ATTENTION!** Scalding hazard! Never point the steam directly at people, animals or plants.
- ATTENTION!** Scalding hazard! Never touch the appliance's cleaning head/nozzle while in operation! Keep at least 30 cm away. Wear shoes when cleaning floors.
- Never undo the water tank catch during use. Always ensure that the water tank is firmly closed before using the appliance.
- ATTENTION!** Scalding hazard! Only hold the appliance by the handle during operation.
- ATTENTION!** Tripping hazard! When using the appliance, lay the mains cable so that there is no risk of anyone catching themselves on it.
- ATTENTION!** Scalding hazard! The floor pad/nozzle may be very hot during and shortly after use. For this reason, wait a few minutes for the cloth/nozzle to cool off completely before you remove it.
- ATTENTION!** Scalding hazard! Let the appliance and accessories cool off completely before you clean it, disassemble and/or stow it.
- Store the appliance so that it is not accessible to children or animals.



Risk of electric shock and fire

- In the interest of your own safety, check the appliance, the mains cord, and the mains plug for damages before each use. Only use the appliance when it is in a fully functional state.
- Never attempt to repair an electrical appliance or replace parts yourself. In the event of defects, the appliance may no longer be used. Contact the nearest customer service centre/qualified professional or, in the event of damage, contact customer service.
- In the event of damage/malfunctions, turn off the appliance immediately.
- Only connect the appliance to a properly installed socket with protective earth contacts. The socket must also be easily accessible after the appliance has been connected. The mains voltage must correspond to the technical data of the appliance. Only use proper extension cords, whose technical data correspond to those of the appliance.
- Lay the mains cord such that it is not crushed or creased and such that it does not come into contact with hot surfaces.
- Do not use the appliance in rooms containing easily flammable dust or toxic and explosive vapours.

- Never immerse the appliance in water or other liquids. Make sure that the appliance, the mains cord or the mains plug do not fall in water or are at risk of getting wet. If the appliance falls in water, immediately disconnect the power supply.
- Never touch the appliance, the mains cord or the mains plug with wet hands.
- The steam may not be pointed towards the mains cord or parts containing electric components (e.g. stereo systems, televisions, monitors, switches, lights, microwave appliances etc.).
- Never leave the appliance unattended when plugged in to the electricity supply.
- Turn the appliance off by pulling the mains plug out of the socket
 - if you are not using the appliance,
 - before removing floor pad,
 - before attaching or removing a nozzle,
 - before filling/emptying the water tank,
 - in a storm or
 - before you clean/stow the appliance.
- If you would like to remove the mains plug from the socket, do not pull on the power cable, but always on the plug.




Caution: Damage to the appliance and property

- Each time before using the appliance, check the floor pad for wear. The cloth may not be used if it is visibly worn down or exhibits damages. Otherwise it could damage your floor.
- Only use the appliance when it is functional and has been completely assembled and the floor pad for cleaning the floor has been attached.
- Only use accessories included in the product contents or exclusively those recommended by the manufacturer.
- Always work with sufficient lighting.
- Do not insert anything in the appliance's openings/nozzles and ensure that they are not plugged.
- Never fill the appliance with cleaners or other additives. They may irreparably damage the appliance and as such, the safe operation of the appliance can no longer be assured.
- Never apply the vapour stream to one area for more than approximately 10 seconds. Otherwise, it could damage the surface.
- Surfaces, which have been treated with wax, may lose their wax coat due to heat and steam.
- Do not overfill the water tank. Use tap or distilled water to fill the appliance. Other liquids may cause damage to the appliance.
- Never operate the appliance without water.
- Do not allow the appliance to fall and do not subject it to strong percussions.
- Do not subject the appliance to extreme temperatures, severe changes in temperature, direct sunlight or moisture.
- Empty the water tank completely before you stow the appliance.
- Stow the appliance in a dry, clean, and cool place.

Warranty conditions


Defects arising due to improper handling, damage, calcification or attempts at repair are excluded from the guarantee. This also applies to normal wear and tear of the individual components.

Product contents

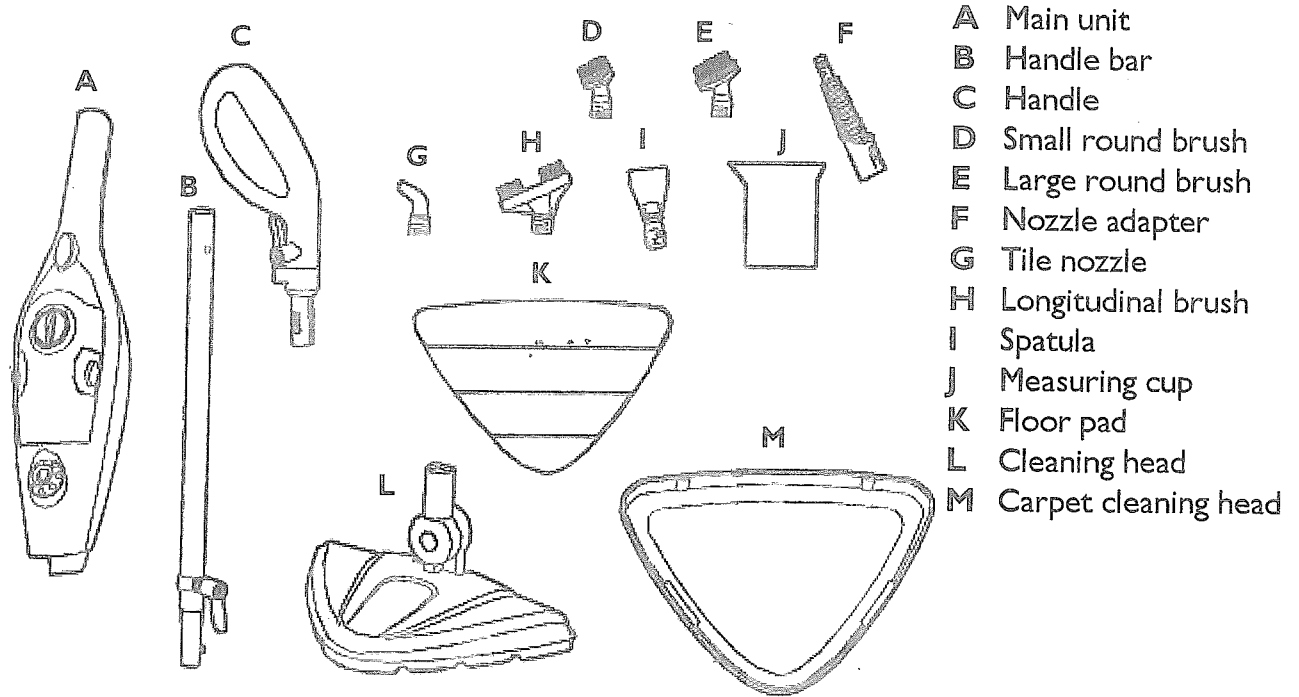






Visit our website to order more original spare parts/accessories:
www.service-shopping.de

Appliance overview

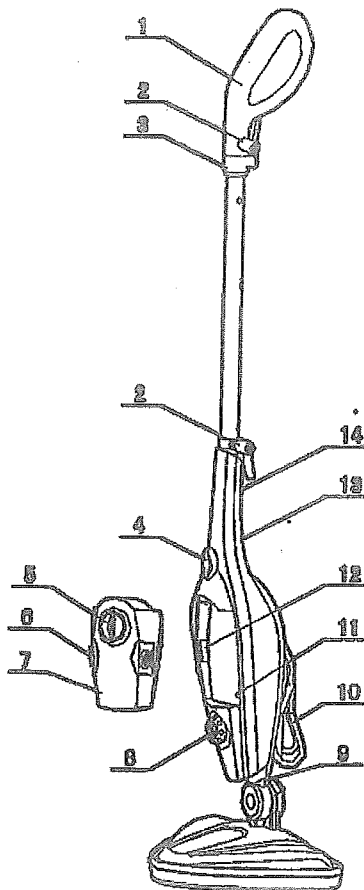

- 1 Handle
- 2 Rotatable hook for winding up the cord
- 3 Cord holder
- 4 Steam On/Off switch
- 5 Water tank cap
- 6 Release buttons for the water tank
- 7 Water tank
- 8 Steam quantity control
- 9 Steam nozzle
- 10 Power cord
- 11 Water valve
- 12 Power LEDs
- 13 Steam activating switch when used as a handheld steam cleaner without handle bar (this switch is deactivated when the handle bar has been inserted.)
- 14 Handle bar release button

    Appliance functions (nozzle functions)

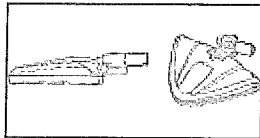

- Cleaning head (L) with floor pad (K): for steam cleaning smooth floors and, providing you use the carpet cleaning adapter (M), carpets. The angle of the cleaning head to the main unit can be smoothly adjusted both horizontally and vertically.
- Small and large round brush (D+E): The round brush can be used to clean nearly everything, e.g. ovens, bathroom fixtures, bath tubs, sinks, toys.
- Tile nozzle (G): for cleaning grouts, corners, nooks and crannies or other hard-to-reach areas
- Longitudinal brush (H): for removing dirt in grouts and grooves
- Spatula (I): for removing stubborn dirt, e.g. on stoves, ovens, cooking hoods

Prior to first use



ATTENTION!

- Keep children away from the packaging. There is, among other things, a danger of suffocation!
1. Unpack all parts and make sure that the product contents are complete (see chapter “Product contents”) and check for any damages from transport. If any components are damaged, do not use them (!). Instead contact our customer service centre.
 2. Pull any foils and/or stickers off of the appliance and accessories.
 3. Assemble the appliance (see chapter “Assembling the appliance”).




NOTICE: Water residue in the tank is attributed to previous testing of the appliance.

Assembling the appliance




ATTENTION!


- Danger of electrocution! During assembly and/or disassembly the appliance must not be connected to the power supply and must have cooled off.
1. Carefully place all accessories on a level surface. As a precautionary measure, set down a protective foil to prevent any damage to sensitive surfaces.

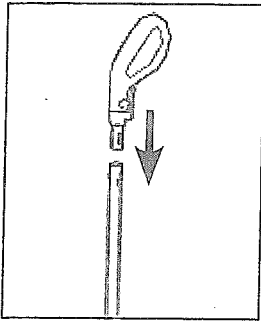

2. Insert the handle end piece (C) in the handle bar (B). If applicable, depress the catch on the handle end piece so that it fits into the handle bar. The catch must lock into the handle bar opening. Turn the handle back and forth for this.

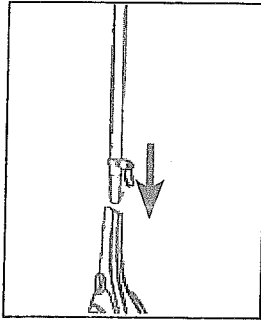


3. Insert the end of the handle bar in the top opening of the main unit (A). The handle bar must audibly lock into place. To remove the handle bar depress the release button (14) and pull the handle bar out at the same time.

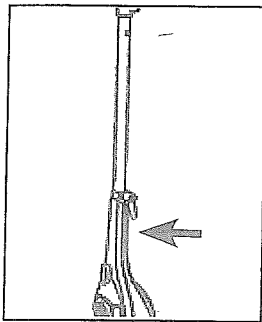


4. Turn the top hook for winding up the cord (2) up and the bottom one down and wind the power cord around both hooks.

In order to quickly unwind the power cord again, turn the top hook of the cord spool down.

Attaching/removing the cleaning head

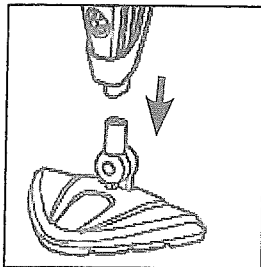


- Insert the end piece of the cleaning head (L) in the steam nozzle (9) of the main unit until the catch locks into the opening next to the steam nozzle.

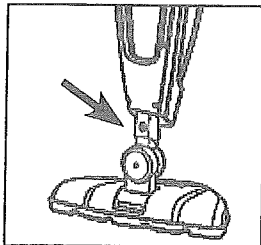

- To remove the cleaning head, depress the catch and pull the cleaning head out at the same time.



Attaching/removing the nozzles

If you would like to use one of the other enclosed nozzles, it must first be attached to the nozzle adapter (F):

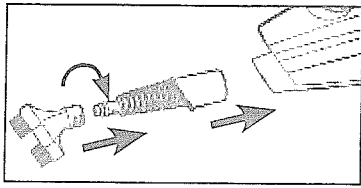

- An arrow is embossed on the end piece of the nozzle and the nozzle adapter. Connect the two parts so that the arrows are pointing towards one another and then turn the nozzle to the stop.
- To remove the nozzle, turn it back until the arrows on the nozzle and adapter are pointing towards one another and pull it out.
- The nozzle adapter will be attached to the main unit in the exact same manner as the cleaning head.
- head : Insert the nozzle adapter in the steam nozzle (9) of the main unit until the catch audibly locks into place.
- To remove the nozzle adapter, depress the catch and pull the adapter out at the same time.

Attaching the floor pad and carpet cleaning head

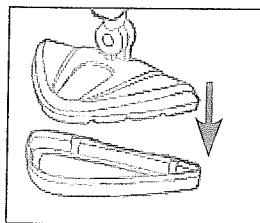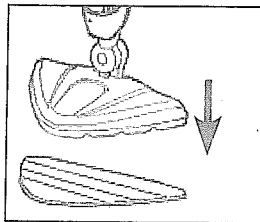

- The floor pad (K) is attached to the cleaning head with Velcro straps. Place it on the cleaning head and push it firmly. After use, simply pull it off of the cleaning head.
- To clean carpets, place the carpet cleaning head (M) flat on the floor and place the cleaning head with the floor pad in the carpet cleaning head. Press cleaning head firmly into the carpet cleaning head until it locks into place.

Filling the water tank



ATTENTION!


- Always turn off the appliance before you fill the water tank.
- Never fill the appliance with cleaners or other additives. They may irreparably damage the appliance and as such, the safe operation of the appliance can no longer be assured.

If the power LEDs (12) are blinking red, the water tank (7) is empty and has to be filled.



We recommend that, ideally, you fill the water tank with distilled water to prevent calcification, especially if the hardness of your tap water is very high.

5. Take the water tank out of the appliance to fill it. To do so, depress both side release buttons (6).
6. Open the water tank: Turn the water tank lid (5) a bit in a counterclockwise direction and remove it.

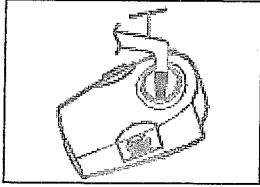

7. Fill the tank with cold, clean water. You can use the enclosed measuring cup (J) to do so. The tank holds up to 350 ml.
8. Screw the water tank lid back onto the water tank by turning it in a clockwise direction and then insert the tank back into the main unit. It must audibly lock into place.

Use




ATTENTION!

- Scalding hazard! Never point the steam towards people, animals, plants or equipment containing electric components (e.g. stereo systems, televisions, switches, lights, microwave appliances etc.).
- Scalding hazard! Only hold the appliance by the handle during operation.
- Always work with sufficient lighting.
- Scalding hazard! After deactivating the appliance, hot steam is emitted for a few seconds! Be careful!
- Always shut off the appliance and pull the mains plug out of the socket before you remove the floor pad, change the nozzle, refill the water tank or stop using the device.
- ATTENTION! Scalding hazard! The floor pad/nozzle may be very hot during and shortly after use. For this reason, wait a few minutes for the cloth/nozzle to cool off completely before you remove it.
- ATTENTION! Damage to property! Do not use the device on very cold glass surfaces (with outside temperatures of below 0 °C). Due to the difference in temperature the glass may break.
- Each time before using the appliance, check the floor pad for wear. It may not be used if it is visibly worn down or is damaged. Otherwise it could damage your floor.
- Only use the appliance when it is functional and has been completely assembled and the floor pad (when cleaning the floor) has been attached.
- Never apply the vapour stream to one area for more than approximately 10 seconds. Otherwise, it could damage the surface.

Cleaning the floor




- It is recommended that you briefly sweep the floor surface with a broom or vacuum it before using the appliance.
 - If the power LEDs (12) are blinking red, the water tank (7) is empty and has to be filled.
1. Mount the handle bar with the handle and the cleaning head on the main unit. Attach the floor pad to the cleaning head and, if you would like to clean a carpet, the carpet cleaning head (see chapter "Assembling the appliance").
 2. Fill the water tank (see chapter "Filling the water tank").
 3. In order to unwind the power cord, turn the top hook of the cord spool down. Hang the power cord in the cord holder (3) for better handling of the steam cleaner when cleaning floors and so that you do not trip over the cord.

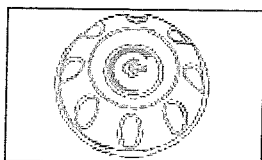

4. Turn the knob for the steam quantity control (8) to the minimum setting by turning it counterclockwise until it comes to a stop.
5. Park the appliance in an upright position. The hinge of the cleaning head locks in when in an upright position.
6. Insert the mains plug in a properly installed socket that is easily accessible. The power LEDs (12) behind the water tank will illuminate in red as soon as operating voltage is present. Wait until the appliance has reached the operating temperature and the power LEDs are blue.
7. Push the steam On/Off switch (4) on the front of the main unit. (The steam activating switch on the back (13) has been deactivated when the handle bar is inserted.) Steam will begin to be emitted from the cleaning head. You can now increase the quantity of steam by turning the knob for the steam quantity control. **NOTE:** After the knob is turned, it will take a few seconds until the respective steam quantity is reached.
8. Hold the appliance by the handle and tip it slightly towards the floor in order to release it from the upright locking position.
9. Slowly slide the cleaning head back and forth over the floor. The floor will be cleaned in the process.
10. When you have finished cleaning the floor, push the steam On/Off switch and pull the mains plug out of the socket. Never pull on the cord, but always on the plug.
11. Wait a few minutes for the appliance to cool off before you remove the floor pad. Be aware that when turning off the appliance a wet area can form beneath the cleaning head.
12. Follow the instructions in the section "After use".

Use as a handheld steam cleaner

1. Take the handle bar and cleaning head off of the main unit and mount the nozzle adapter with the desired nozzle on it (see chapter "Assembling the appliance" and "Appliance functions (Nozzle functions)").
2. Fill the water tank (see chapter "Filling the water tank").

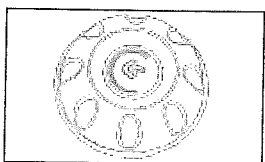

3. Turn the knob for the steam quantity control (8) to the minimum setting by turning it counterclockwise until it comes to a stop.
4. Insert the mains plug in a properly installed socket that is easily accessible. The power LEDs (12) behind the water tank will illuminate in red as soon as operating voltage is present. Wait until the appliance has reached the operating temperature and the power LEDs are blue.
5. Push the steam On/Off switch (4) on the front of the main unit. In order to emit steam, Push the steam activating switch (13) on the back of the main unit. Release the steam activating switch to stop emitting steam. You can now increase the quantity of steam by turning the knob for the steam quantity control. **Note:** After the knob is turned, it will take a few seconds until the respective steam quantity is reached.
6. Slowly let the nozzle glide over the surface to be cleaned.
7. When you have finished cleaning, push the steam On/Off switch and pull the mains plug out of the socket. Never pull on the cord, but always on the plug.
8. Wait a few minutes for the appliance to cool off. Afterwards, you can change the nozzle.
9. Follow the instructions in the section "After use".

After use

1. Turn off the appliance by pressing the steam On/Off switch and pull the mains plug.
2. After every use, take the water tank out of the main unit and empty it.
3. Let the appliance and accessories cool off completely.
4. Clean the appliance and floor pad after use as described in the chapter "Cleaning and care".

Cleaning and care



ATTENTION!

- Prior to each cleaning, pull the plug out of the socket.
 - Scalding hazard! Always shut off the appliance and pull the mains plug out of the socket and let the appliance cool off completely before you clean it or remove accessories.
 - Scalding hazard! The floor pad may be very hot shortly after use. For this reason, wait a few minutes for the cloth to cool off completely before you remove it.
 - Never immerse the main unit in water or other liquids. Make sure that the main unit, the power cord or the power plug can not fall in water or get wet.
 - Never touch the main unit, the power cord or the power plug with wet hands.
 - Do not use any solvents, abrasive cleaning agents or cleaning pads for cleaning. They could damage the appliance.
 - The nozzles are not suitable for the washing machine, dishwasher or dryer! Only air dry them and do not in any case use a hair dryer.
-
- If necessary, wipe off the main unit, handle bar, and handle with a soft, damp cloth and dry them with a soft cloth.
 - Rinse the dirty nozzles with luke warm water and if necessary, with a mild cleaner. Allow them to air dry.
 - The floor pad can be washed in the washing machine. Be sure to observe the notes on the washing label. Do not use any softeners or bleaching agents!

Storage



ATTENTION!

- Scalding hazard! Always let the appliance to cool off completely before you store it.
 - Empty the water tank completely before you stow the appliance.
 - Do not subject the appliance to extreme temperatures, severe changes in temperature, direct sunlight or moisture.
-
- Store the appliance in a frost-free, dry, clean, cool area that is not accessible to children or animals.
 - Prior to using the appliance again, the water tank should always be checked for residual water and be completely emptied if necessary.

Troubleshooting

If the appliance is not working properly, please check whether you are able to rectify the problem yourself first. Otherwise contact customer service.

Do not attempt to repair a defective appliance yourself.

Problem	Potential cause/solution
The handle and the handlebar do not fit together/the handle does not lock into place.	<ul style="list-style-type: none"> It is possible that the cable winder becomes twisted at the handle during the production process. This prevents the handle from locking into the handlebar. Turn the cable winder slightly at the handle until the handlebar fits directly into the opening. When the latch locks into place, the handle has been securely connected with the handlebar.
The appliance is not working. The power LEDs are not illuminating.	<ul style="list-style-type: none"> Is the plug properly connected with the socket? Is the socket defective? Try another socket. Check the fuse for your mains connection.
No steam is released.	<ul style="list-style-type: none"> Have you pushed the steam On/Off switch (4) on the front of the main unit? Please note: The steam activating switch on the back (13) is deactivated when the handle bar has been inserted. When being used as a hand held steam clener, the steam On/Off switch (4) on the front of the main unit has to be activated. The steam activating switch on the back (13) does not work when the steam on/off switch is not activated! Has the steam quantity been set high enough? Turn the knob for the steam quantity control clockwise to increase the amount of steam. The appliance is still not operational. The appliance must heat up for a few seconds until steam can be emitted. The water tank is empty. Fill the water tank (see chapter "Filling the water tank"). Has the tank been properly inserted in the main unit? Check to make sure it is properly seated. The nozzle is plugged. Clean the nozzle.

Technical data

Product no.:	Z 02770
Model number:	JJ-SC-005B
Power supply:	220 – 240 V~, 50 Hz, 1500 W
Safety class/level:	I, IPX4
Water tank capacity:	max. 350 ml

