 


24254

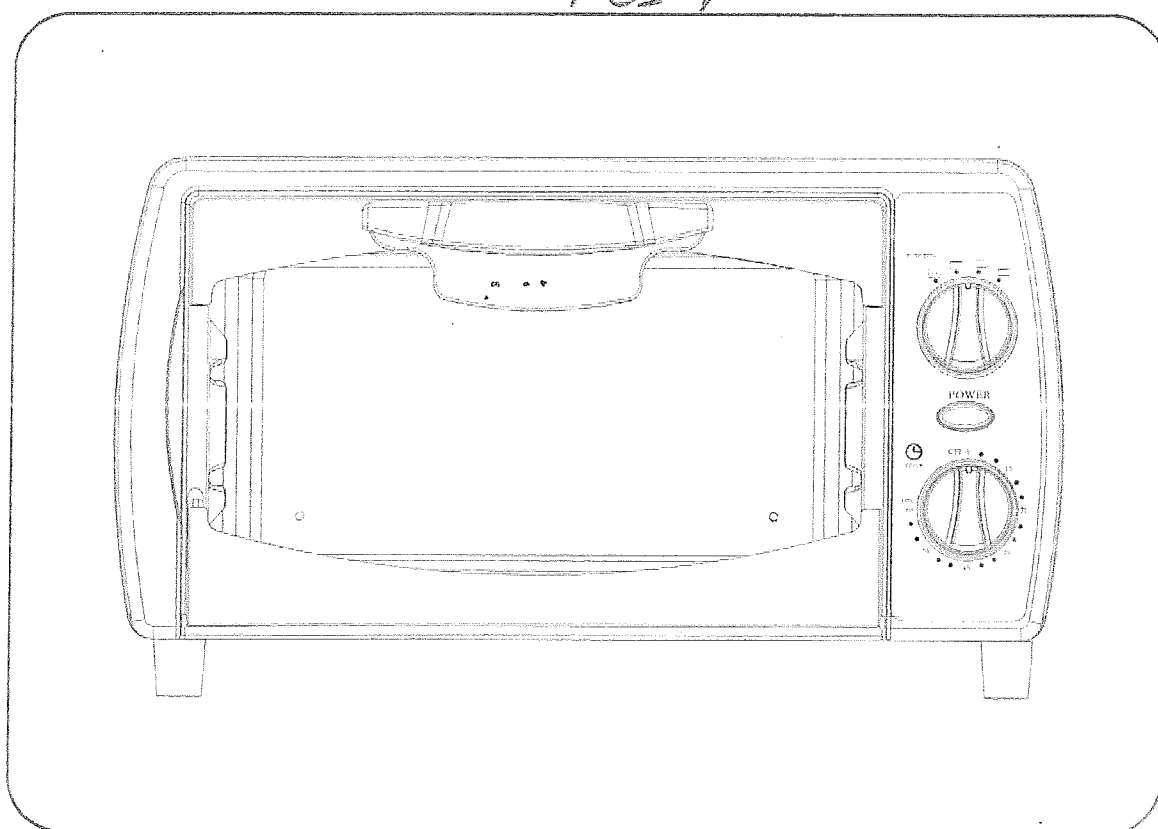

## **Gebrauchsanleitung**

ab Seite 2

DE

## **Instruction manual**

starting on page 13

GB

## **Mode d'emploi**

à partir de la page 23

FR

## **Handleiding**

vanaf pagina 33

NL

## Contents

Meaning of symbols in these instructions _____	14
Safety instructions _____	14
Intended use _____	14
Risks of injury _____	14
For your health _____	14
The right location _____	15
Proper use _____	15
Warranty conditions _____	16
Product contents and appliance overview _____	17
Prior to first use _____	18
Use _____	18
Cleaning _____	20
Troubleshooting _____	20
Technical data _____	21
Disposal _____	21

---

Dear customer,

We are delighted that you have decided on this infrared oven. With its compact 9-litre cooking chamber, it is also suitable for small kitchens.

We hope you enjoy your new infrared oven and the meals you prepare with it!

If you have any questions, please contact customer service via our website:

**[www.service-shopping.de](http://www.service-shopping.de)**



Prior to using the appliance for the first time, please carefully read through the operating instructions and store them in a safe place. These instructions are to accompany the appliance when it is passed on to others. The manufacturer and importer assume no liability in the event the data in these instructions have not been observed!

As part of ongoing development, we reserve the right to alter products, packaging or enclosed documentation at any time.


## Meaning of symbols in these instructions



All safety notices are marked with this symbol. Please carefully read through and obey the safety notices in order to avoid injury to persons and property.



Tips and recommendations are marked with this symbol.

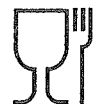

Suitable for use with food.

## Safety instructions

### Intended use

- ☐ The appliance is intended for grilling and baking foods.
- ☐ The appliance is **not** intended for use with an external timer or a separate telecontrol system.
- ☐ The appliance is intended for domestic, not commercial, use.
- ☐ Only use the appliance for the specified purpose and as described in the instructions. Any other use is deemed improper. Incorrect operation and improper handling may cause the appliance to malfunction and result in injury to the user.



### Risks of injury

- ☐ Attention: Danger of suffocation / injury! Keep the packaging material and the appliance away from children and animals. This appliance is not a toy!
- ☐ Attention: Burn hazard! During operation, the appliance becomes very hot. Be absolutely sure that you do not come into contact with the heated parts during and after using the appliance. Only touch the handles and the controllers when the appliance is in operation or directly after deactivating it. Only clean, transport and stow the appliance once it has cooled off completely.
- ☐ Attention: Scalding hazard due to heat, hot steam or condensed water! We recommend using potholders or kitchen gloves when opening the glass door and when removing or inserting food.
- ☐ Attention: Burn hazard! Always use potholders or kitchen gloves when removing or inserting the hot grate or baking sheet.



### For your health

- ☐ There may be some production residues stuck to the appliance. To avoid health risks, clean the inside of the housing, the grate and baking sheet thoroughly before first use (see chapter "Cleaning") and let the appliance heat up for approximately 15 minutes without food.
- ☐ Clean the appliance after every use and keep it clean to prevent the build-up of germs!
- ☐ Only prepare food that is suitable for cooking, grilling and consumption.



### The right location

- ☐ Only use the appliance in enclosed areas.
- ☐ Always place the appliance on a dry, level, solid and heat-resistant surface with adequate space of approximately 10 cm on all sides and 30 cm of overhead space.
- ☐ Maintain adequate distance to other heat sources such as stovetops or ovens in order to prevent damage to the appliance.
- ☐ Never use the appliance if a gas source is nearby.
- ☐ The appliance should never be set up and used when highly flammable materials are nearby (curtains, textiles, etc.).
- ☐ To prevent electrical shocks, set up the appliance so that there is no risk of it, the mains cord and plug coming into contact with water or other liquids. If the appliance falls in water, immediately disconnect the power supply.
- ☐ Only connect the appliance to a properly installed socket with protective earth contacts. The socket must also be easily accessible after the appliance has been connected. The mains voltage must correspond to the technical data of the appliance. Only use proper extension cords, whose technical data correspond to those of the appliance.
- ☐ Ensure that the connected mains cord does not pose a tripping hazard. The cable may not hang down from the set up area to prevent the appliance from being pulled down. Never pull on the mains cord in order to move the appliance.
- ☐ Lay the cable such that it is not crushed or creased and such that it does not come into contact with hot surfaces.
- ☐ Do not subject the appliance to extreme temperatures, severe changes in temperature, direct sunlight or moisture.
- ☐ Do not allow the appliance to fall and do not subject it to strong percussions.



### Proper use


- ☐ Attention: Fire hazard! Do not use the appliance if easily flammable gases are present in the air.
- ☐ Attention: Fire hazard! Make sure that foods containing large amounts of oil and fat do not overheat and therefore catch fire.
- ☐ Do not cover the appliance during operation to prevent a risk of fire.
- ☐ Check the appliance for damages prior to each use. The appliance may not be used if it, the mains cord or plug exhibit visible damages. Do not use the appliance if it had a malfunction or has fallen down. In this case have it checked by an authorised service point.
- ☐ Never attempt to repair an electrical appliance yourself, rather locate the nearest customer service centre/qualified professional for your own safety. In the event of damage, contact customer service.
- ☐ Only use the enclosed accessories from the manufacturer. All warranty claims are forfeited if accessories are used, which are not authorised by the manufacturer.
- ☐ Do not leave the appliance unattended when in operation!
- ☐ Do not move the appliance when in use.

- ☐ Do not place flammable materials (e.g. cardboard, plastic, paper or candles) on or in the appliance.
- ☐ Make sure that the heating elements do not come into contact with food. If food does burn onto the heating element, pull the mains plug and let the appliance cool off completely before you remove the burnt-on food. Do not use any sharp or pointy objects like knives or forks for this.
- ☐ Do not insert foods packed in clingfilm or plastic bags in the appliance.
- ☐ Meals of excessive size, metal foil packages or tools may not be placed in the appliance because they could cause a fire or an electrical shock.
- ☐ Never spray cold water on the glass door of the appliance during or directly after use. The glass could shatter as a result.
- ☐ Always keep the glass door closed when the appliance is operating.
- ☐ Do not place any heavy objects on the glass door when it is open.
- ☐ Always place the grate and baking sheet on a heat-resistant base when they are hot.
- ☐ Remove the mains plug from the socket,
  - if you are not using the appliance,
  - if a fault occurs during operation,
  - before a storm,
  - before you clean it.
- ☐ If you wish to remove the mains plug from the socket, never pull on the cable, but always on the plug.
- ☐ Never touch the appliance, the mains cord or the mains plug with wet hands.

### **Warranty conditions**

Defects arising due to improper handling, damage or attempts at repair are excluded from the warranty. This also applies to normal wear and tear.

## Product contents and appliance overview

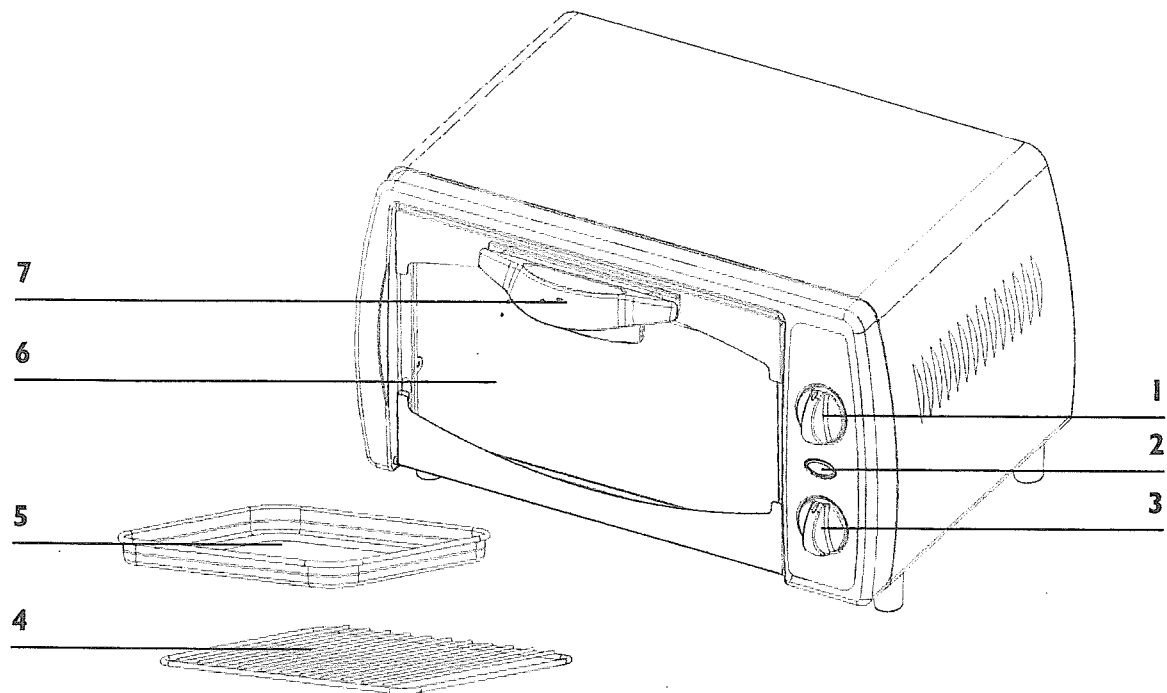

- 1 BACKEN (bake)  
operating switch 4 settings: OFF  
(deactivated); top heat; bottom heat;  
top/bottom heat
- 2 POWER light
- 3 TIMER dial (OFF-0 to 60 minutes)

- 4 Grate
- 5 Baking sheet
- 6 Glass door
- 7 Door handle

Not shown:  
Top and bottom heating elements  
(in the appliance)


## Prior to first use



### ATTENTION!

- ☐ Risk of suffocation! Keep the packaging material away from children and animals.
  - ☐ Burn hazard! During operation, the appliance becomes very hot. Be absolutely sure that you do not come into contact with the heated parts during and after using the appliance. Only touch the handles and the controllers when the appliance is in operation or directly after deactivating it.
- 
1. Unpack the appliance and make sure that the product contents are complete and that there are no transport damages. Should you identify any transport damage, do not use the appliance (!); instead please promptly consult the customer service.
  2. There may be some production residues stuck to the appliance. To avoid health risks, clean the inside of the housing, the grate and baking sheet thoroughly before first use (see chapter "Cleaning").
  3. Always place the appliance on a dry, level and heat-resistant surface with adequate space of approximately 10 cm on all sides and 30 cm of overhead space to flammable objects. Please make sure that the appliance is not accessible to children and animals.
  4. Insert the mains plug in a properly installed and grounded 220–240 V socket with earthing contacts. Your infrared oven is now ready for operation.
  5. The first time you use the appliance, do so without food as residual coating could cause a small amount of odour or smoke to form. Let the empty appliance heat up for approximately 15 minutes with top/bottom heat (see chapter "Use"). In the process, ensure that the room is well ventilated, e.g. with windows that have been opened wide!

## Use

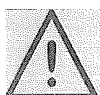

### ATTENTION!

- ☐ Burn hazard! During operation, the appliance becomes very hot. Be absolutely sure that you do not come into contact with the heated parts during and after using the appliance. Only touch the handles and the controllers when the appliance is in operation or directly after deactivating it.
  - ☐ Scalding hazard due to heat, hot steam or condensed water! We recommend using potholders or kitchen gloves when opening the glass door and when removing or inserting food.
  - ☐ Burn hazard! Always use potholders or kitchen gloves when removing or inserting the hot grate or baking sheet.
  - ☐ Make sure that the room is adequately ventilated when the appliance is in use.
  - ☐ Make sure that the meals you wish to prepare do not come into contact with the heating elements of the appliance.
-



- Generally speaking, you do not have to preheat the appliance. When preparing meals, which must be cooked “to perfection”, preheating the oven is still recommended for determining the exact cooking time.
- Please observe the manufacturer’s specifications on time and temperature when preparing frozen foods.
- Do not directly place any foods containing fat or oil on the grate to avoid contamination of the bottom heating element with dripping fat/oil. Use the enclosed baking sheet!

1. Place your meals on the grate or the baking sheet.
2. Open the glass door and push the grate and/or baking sheet into the appliance. Then close the glass door.
3. Turn the BACKEN (bake) operating switch clockwise to top heat, bottom heat or top/bottom heat.
4. To start baking, set the desired time with the TIMER dial (no more than 60 minutes). The POWER light will illuminate.



If you would like to set a time of **up to 10 minutes**, first turn the TIMER dial well past the 10 minute mark and then back to the desired time.

5. Once the set time has elapsed (TIMER dial has returned to the OFF-0 position), a signal sound will be emitted and the POWER light will go off.
6. If you would like to stop the baking process prematurely, turn the BACKEN (bake) operating switch to OFF. The appliance will automatically stop the heat supply. Let the TIMER dial continue to move until it reaches the OFF-0 position.
7. Open the glass door and carefully take out the grate or baking sheet. Always use potholders or kitchen gloves to do so. Place the grate or the baking sheet on a heat-resistant base.
8. Pull the mains plug out of the socket, let the appliance cool off completely and then clean it (see chapter “Cleaning”). Do not allow any leftover food to dry!



## Cleaning



### ATTENTION!

- ☐ Burn hazard associated with hot parts! Let the appliance cool off each time before you clean it.
  - ☐ Attention: Risk to life due to electrical shock! Prior to each cleaning, pull the plug out of the socket. Never submerge the appliance, the mains cord, and the plug in water. Never touch the appliance, the mains cord or the mains plug with wet hands.
  - ☐ Never place the appliance in the dishwasher.
  - ☐ Do not spray any cleaners directly on the appliance.
  - ☐ Do not use any scouring or abrasive cleaners or cleaning pads to clean the appliance. They could damage the surface. Do not use any metallic objects.
- 
- Remove all leftover food from the grate and baking sheet and rinse off both parts with a mild detergent and warm water each time after using the appliance. You can also clean the grate and baking sheet in the dishwasher.
  - If you want to clean the housing of the appliance and the heating elements, wipe them off with a clean, damp cloth.
  - Allow all parts to dry completely before you store them in a clean, dry place that is not accessible for children and animals.

## Troubleshooting

If the appliance is not working properly, please check whether you are able to rectify the problem yourself first. Otherwise contact customer service.

Do not attempt to repair a defective appliance yourself!

Problem	Potential cause/solution
The POWER light does not illuminate.	<ul style="list-style-type: none"><li>• Has the TIMER dial been turned on?</li><li>• With a desired time of 10 minutes or lower: Did you turn the TIMER dial past the 10 minute mark before setting the desired time?</li><li>• Is the plug properly connected with the socket?</li><li>• Is the socket defective? Try another socket.</li><li>• Check the fuse for your mains connection.</li></ul>
The POWER light illuminates, but the appliance doesn't work.	<ul style="list-style-type: none"><li>• Has the BACKEN (bake) operating switch been turned to the OFF position?</li></ul>
The meals are not completely cooked.	<ul style="list-style-type: none"><li>• Extend the baking time by adjusting the TIMER dial.</li><li>• If necessary, vary by activating top and bottom heat.</li></ul>

## Technical data


Model number: CS0901A  
Product number: Z 04403  
Voltage supply: 230 V~ 50 Hz  
Output: 1000 W  
Temperature: up to 230 °C  
Volume: 9 litres  
Timer: 0–60 minutes  
Safety class: I



## Disposal



The packaging material can be recycled. Dispose of the packaging in an environmentally-friendly manner and make it available for the recyclable material collection-service.

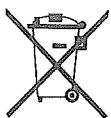

Dispose of the appliance in an environmental-friendly manner. Dispose of it at a recycling centre for old electrical and electronic appliances. For more information, please contact the administration in your community.

