


LED Cherry Blossom Tree
Cat. No.: 24461

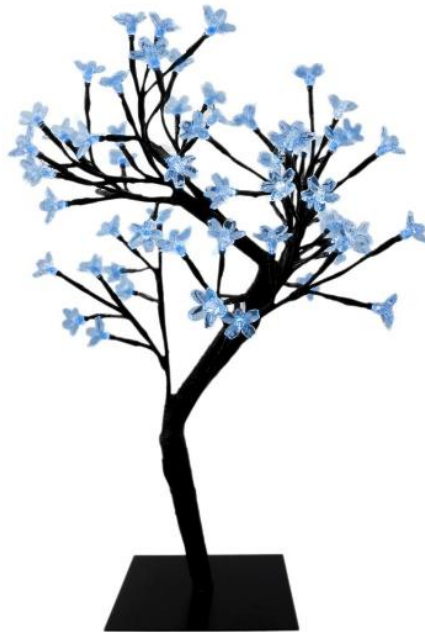

SAFETY:

- Remove packaging
- Avoid wet and humid conditions
- Please unplug when not in use
- Do not use if the insulation is damaged
- Do not cover the LEDs
- Do not replace the LEDs
- Do not remove or insert bulbs when the product is connected to the mains supply
- Do not connect the product electrically to an extend item
- Keep away from heat
- Use only 24V AC adaptor supplied. Do not connect directly to mains supply.
- If the insulation or wiring, or LEDs has been damaged you must discard the product
- **INDOOR USE ONLY**
- This is not a toy. For decorative purpose only. **KEEP AWAY FROM SMALL CHILDREN AND PETS. CHOKING HAZARD! MAY CONTAIN SMALL PARTS.**

TRANSFORMERS: This product is supplied with a 24V AC 2.4VA transformer and should only be used with this or an equivalent approved transformer.

SPECIFICATION:

Transformer: Class II

Transformer I/P: 230V AC 50Hz

Transformer O/P: 24V AC 2.4VA

Rated voltage of light chain: 24V AC

Rated wattage of complete chain: 2.4W (64LEDs)

Rated voltage and wattage of LED: 3V / 0.03W

LED Tree: Class III

Power Cable Length: about 3 meter

Size: 45cm in Height

IMPORTANT: THIS PRODUCT CAN ONLY BE USED INDOORS. PLEASE ENSURE THAT THE TRANSFORMER IS PLUGGED INTO THE MAINS SUPPLY INDOORS AND NOT OUTDOORS, OR IN DAMP CONDITIONS.

OPERATION:

- Carefully remove product from packaging be sure not to cut any wires
- Attach the lights' cable to the transformer by inserting the pin fully into the transformer
- Gently shape the branched into the desired position.
- Connect the transformer into mains supply. The lights will be ON
- Disconnect the transformer from the mains supply to turn off the lights.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 12.05.2014