

PLEASE READ THE MANUAL BEFORE YOUR FIRST USE. KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!

**WARNINGS**

THIS PRODUCT SHOULD NOT BE USED IN PLACE OF MEDICATION PRESCRIBED FOR YOU BY YOUR DOCTOR. DO NOT USE THIS PRODUCT WITHOUT MEDICAL ADVICE IF YOU ARE PREGNANT.

 
OPERATING INSTRUCTIONS

One end of the Massage pen works as a pen, while the other has a gentle vibrating textured head that stimulates.

To install the battery before first use

- Remove the pen cap by rotating in an anti-clockwise direction.
- Insert the supplied battery and ensure that the + symbol is facing towards the top of the pen.
- Re-attach the cap and turn it clockwise until tightened.
- Simply change the battery (international size LR1/N) when the vibration gets weak.

Simply press the vibrating head of the pen onto your face, hand or any part of your body to release tension and stress.

**To change the ball point pen refill**

- Pull cap upwards.
- Turn the refill by turning it in a clockwise direction
- Replace cap by pushing it down
- Gentle reminder: Always retract the nib of the pen when not in use.

SPECIFICATIONS

1 x LR1/N type battery, 1.5V⁻, included

WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.



WARNING: You should not dispose of this device with your household waste.

A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Made in PRC

