

# TACHYMETER WATCH

## Art. No.: 25535

### INSTRUCTION MANUAL

#### I. PRODUCT DESCRIPTION



#### A. DIGITAL TIME AND CALENDAR SETTING


In normal time display mode, press B key three times to enter times and calendar setting mode.

- Press D key to initialize the second to zero.
- Press C key, the icon of hour will flash.
- Press D key to reach the correct hour and press C key to continue the setting. You shall pay attention to 12/24H format. If the hour is in 12H format, the icon "A" or "P" appears which means morning or afternoon.
- The setting sequence is as shown below:

Second -> Hour -> Minute -> Month -> Date -> Day

- After setting, press B key to confirm and exit.

#### B. ANALOGUE TIME SETTING

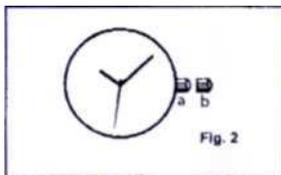

- Position a: Normal running position.
- Position b: Adjusting position
- Pull crown out to position "b" and then turn anti-clockwise to adjust the time
- Push the crown back into the position "a" to confirm and finish.

#### C. ALARM SETTING

In normal time mode, press the B button twice to enter the alarm mode, press the D button to turn on or turn off the alarm ("AL" sign) and the hourly chime ("CH" sign).

- In normal time mode, press the B button twice to enter the alarm mode, press the C button once, hours will be flashing, press C again, minutes will be flashing, press D to adjust the hours and minutes respectively. Press the B button once to return to normal time mode.

#### **D. CHRONOGRAPH FUNCTIONS**

In normal time display mode, press B key once to enter chronograph function.

- Press D key to start/stop the chronograph.
- When stopping, press C key to initialize the chronograph to zero.
- When running, press C key to split count.
- Then press D key to exit split count, and stop counting.
- When exit split count, press C key to display all counts, and press C key again to initialize the chronograph to zero.
- Press B Key to exit.

#### **E. BACKLIGHT**

In any mode, press A key to turn on the backlight function. The backlight will deactivate automatically after several seconds.

#### **DISPOSAL:**

The packaging material is reusable. Dispose of the packaging in an Environmental friendly way by putting it in the appropriate recycle waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany	0180 . 530 63 63* or <a href="mailto:info@eurotops.de">info@eurotops.de</a>
in Austria	01 . 230 60 43 12 or <a href="mailto:info@eurotops.at">info@eurotops.at</a>
in Switzerland	044 . 28 36 125 or <a href="mailto:info@eurotops.ch">info@eurotops.ch</a>
in the Netherlands	026 . 37 36 333 or <a href="mailto:info@eurotops.nl">info@eurotops.nl</a>
in France	0892 . 700 470** or <a href="mailto:info@eurotops.fr">info@eurotops.fr</a>

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 03.12.2014