

## Pocket Radio with Scan Function

Cat. No. 25608

### Functions:

- FM scan radio with earphone / Time display / LED light



1. Hanger hook
2. Earphone jack
3. LED light
4. Volume
5. M button
6. S button
7. LED ON/OFF switch
8. Radio ON/OFF switch
9. △ Button
10. □ Button
11. LCD screen
12. Battery compartment

Insert 2pcs AAA battery into battery compartment.

It already includes a button cell battery for the digital clock.

### Time and date setting:

1. Slide the radio on/off switch to OFF position.
2. Press M button until it shows number only on left screen. Press S button to set month and press M button to confirm setting. Then the screen shows number only on right side. Press S button to set date and press M button to confirm setting and enter time setting.
3. Press S to set hour. "A" means am, "P" means pm. press M button to confirm setting and enter minute setting. Press S button to set minute and press M button to confirm setting.
4. In normal time display, press M or S button to check the current date.

### Radio:

1. Slide the radio on/off switch to ON position.
2. Plug the earphone into the earphone jack.
3. Adjust volume to control the sound.
4. Press □ button to scan radio station.
5. Press △ button to scan next radio station.
6. Slide the radio on/off switch to OFF position when not in use.

### Light:

Press/Release  button to turn on/off LED light

### Attention:

1. Do not disassemble the product without authorization.
2. It is not waterproof. Do not immerse it into any liquid.
3. Keep it away from children.

### DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.

Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling



center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH

Elisabeth-Selbert-Straße 3

40764 Langenfeld, Germany

**EURO**  
*tops*

If technical support is needed, please call ...

in Germany 0180 . 530 63 63\* or [info@eurotops.de](mailto:info@eurotops.de)

in Austria 01 . 230 60 43 12 or [info@eurotops.at](mailto:info@eurotops.at)

in Switzerland 044 . 28 36 125 or [info@eurotops.ch](mailto:info@eurotops.ch)

in the Netherlands 026 . 37 36 333 or [info@eurotops.nl](mailto:info@eurotops.nl)

in France 0892 . 700 470\*\* or [info@eurotops.fr](mailto:info@eurotops.fr)

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice. The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 01.01.2016