

3-Fold Extendable Hose

CAT. NO.: 27495

INSTRUCTION MANUAL

Features

- Forget the traditional bulky hoses with awkward tangles and kinks which are difficult to store away. The expanding hose is easy to use and to store.
- When you turn on the water, it will automatically expand up to 3 times its length. When you turn off the water, it will automatically contract.
- With the special design, it is light and kink-free. It is so compact that it can be stored in a small box, cupboard or on a shelf.
- With quick released connectors make it easier and quicker to work.
- Sprayer gun with 7 spraying patterns

Before use

Please check whether the contents of the package include:



- Quick released connectors (1 2 3 4 5).
- 7 spraying pattern sprayer gun (6).
- 10 meter extendable hose (7).

Assembly instruction

1. With quick connector:

<p>a. Screw 5 into 6</p> <p>Image showing the sprayer gun (6) and connector (5) being assembled.</p>	<p>b. Screw 1 into brass connector 2</p> <p>Image showing brass connector 2 and connector 1 being assembled.</p>	<p>c. click "a" into "b".</p> <p>Image showing the sprayer gun (6) and brass connector 2 assembly.</p>
<p>d. Connect 4 to the tap. If necessary, use adapter 3 in between.</p> <p>Image showing a tap and connector 4 with adapter 3.</p>	<p>e. Screw 2 into brass connector 1.</p> <p>Image showing brass connector 1 and connector 2 being assembled.</p>	<p>f. click "d" into "e".</p> <p>Image showing the brass connector 1 assembly and connector 4.</p>

2. Without quick connector:

- a. Connect the sprayer gun 6 with brass connector 2.
- b. Connect the brass connector 1 with tap.
- c. Turn on the water.

3. When using:

1. Select the spray pattern by turning the ring. You will hear click sound when the pattern is selected.
2. Use the stopper to hold the trigger if necessary.
3. To disconnect the quick released connectors, push back the green collar and pull out connector 4 and 5.

Safety instructions

To use this product correctly, please follow basic precautions listed below:

1. Read the product instruction carefully and keep it for reference.
2. Check whether all the fittings are fixed securely before you use it.
3. Keep the hose away from heat, oil, sharp edges and corrosive substances.
4. Do not drink water from this hose.
5. Do not use it for anything else other than its intended use.

Warning! This product is only for household use. Do not drink from the hose.

Maintenance instructions

- After each use please hang your hose in a cool place to dry and wipe the brass connectors dry with a cloth to keep it in proper working order.
- Store it in a cool place
- Do not expose the hose to the sun as this can shorten the service life of the hose.
- Keep the hose indoor when you do not use it for a long period.

DISPOSAL

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de
in Austria 01 . 230 60 43 12 or info@eurotops.at
in Switzerland 044 . 28 36 125 or info@eurotops.ch
in the Netherlands 026 . 37 36 333 or info@eurotops.nl
in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.