


# ANALOGUE CHRONOGRAPH

## Art.nr. 27546

### INSTRUCTION MANUAL

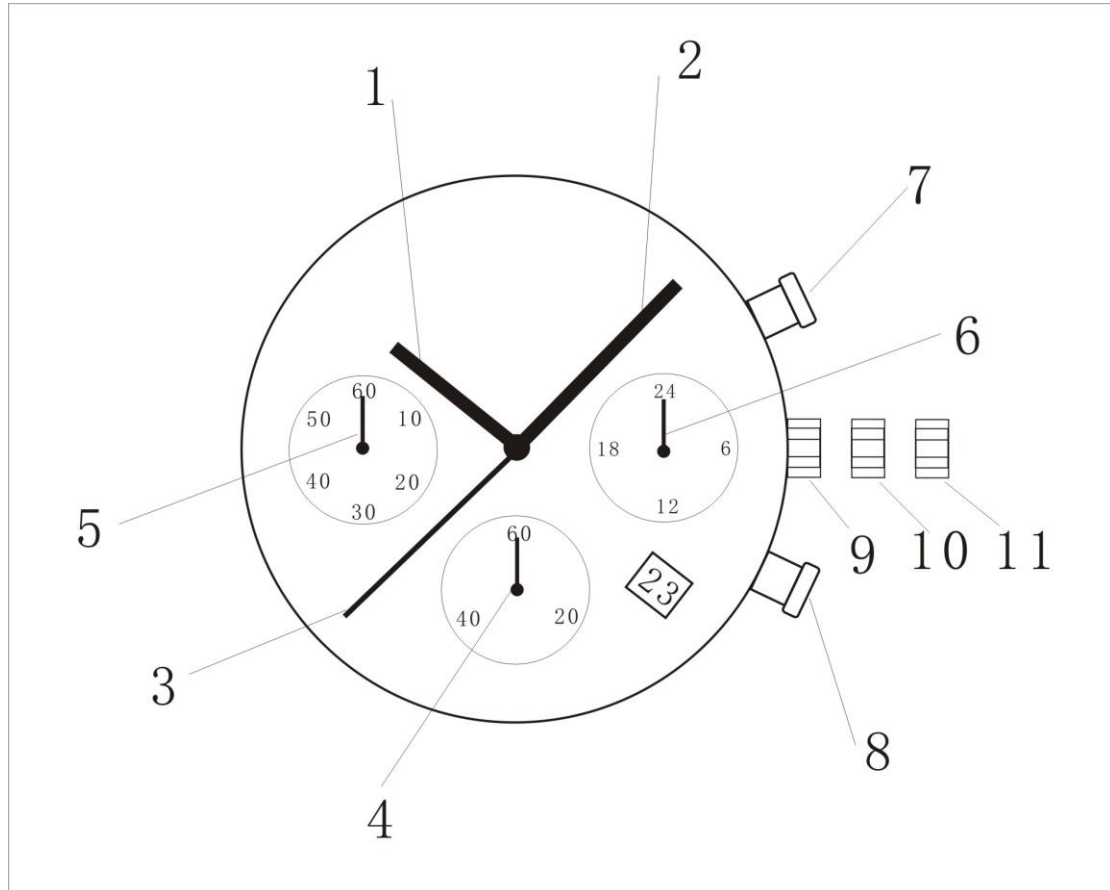

#### NOTE:

- 1: Hour hand                                      2: Minute hand                                      3: Second hand  
 4: Chronograph second hand    5: Chronograph minute hand    6: 24 hour hand  
 7: Button A (Start /Stop)        8: Button B (Reset)    9: Crown at normal position  
 10: Crown at first position (Date setting)    11: Crown at second position (Time setting)

#### Time Setting:

- 1) Pull out the crown to the second click position (Refer to 11).
  - 2) Turn the crown to set hour and minutes hands.
  - 3) Push the crown back into normal position to start time running.
- Remarks --- If the crown is pulled to the second position while the chronograph is started, the chronograph hands will continue to move. This is not a malfunction.

#### Date Setting:

- 1) Pull out the crown to the first click position (Refer to 10).

- 2) Turn the crown clockwise for date setting. Do not set the date between 9:00PM and 3:00AM as this will cause a malfunction.
- 3) Push the crown back into the normal position to start time running.

### **Use Stopwatch / Chronograph :**

- 1) Press button A to start timing.
- 2) Press button A to stop timing.
- 3) Press button B to reset.

### **Seeing the stopped timing while stopwatch/chronograph is continue running :**

- 1) Press button A to start timing
- 2) Press button B to stop timing, you can see the stopped time now but the stopwatch/chronograph is still running
- 3) Press button B again to return to normal stopwatch running.
- 4) Press button A to stop timing.
- 5) Press button B to reset.

### **Resetting the chronograph second and minute hands :**

- 1) Pull out the crown to the second click position (Refer to 11)
- 2) Push the button B until both second and minute hand are pointing to 60.
- 3) Push back crown to normal position to start time.

### **Battery type : AG6 or SR920 or 371**

### **DISPOSAL:**

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany

**EURO**  
*tops*

If technical support is needed, please call ...

in Germany                    0180 . 530 63 63\* or [info@eurotops.de](mailto:info@eurotops.de)

in Austria                    01 . 230 60 43 12 or [info@eurotops.at](mailto:info@eurotops.at)

in Switzerland            044 . 28 36 125 or [info@eurotops.ch](mailto:info@eurotops.ch)

in the Netherlands      026 . 37 36 333 or [info@eurotops.nl](mailto:info@eurotops.nl)

in France                    0892 . 700 470\*\* or [info@eurotops.fr](mailto:info@eurotops.fr)

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 03.02.2016