
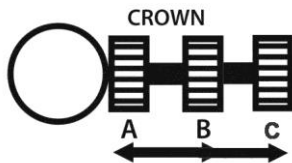


## PILOT WATCH Art.nr. 27548

### INSTRUCTION MANUAL

#### Product Function Model:

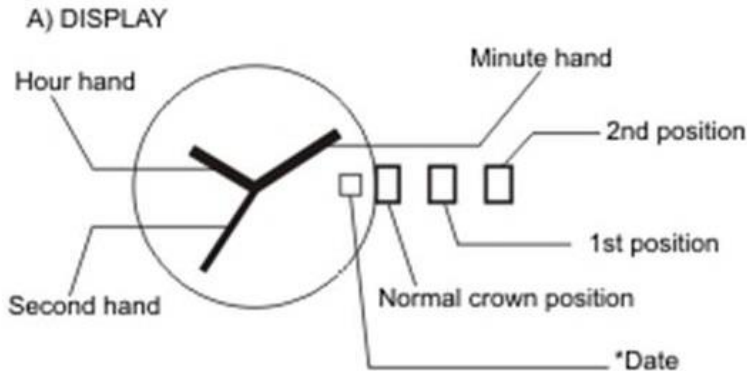

1. Pull the crown out to the "B" position, twist the crown clockwise to adjust calendar.
2. Pull the crown out to the "C" position, twist the crown to adjust time.
3. After the time has been set, push back the crown to the normal position "A".

#### NOTICE:

To make your watch working, remove the stopper which is located between the watch and the crown. Set your desired time and **push back the crown**.

#### DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the



batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany                    0180 . 530 63 63\* or [info@eurotops.de](mailto:info@eurotops.de)

in Austria                    01 . 230 60 43 12 or [info@eurotops.at](mailto:info@eurotops.at)

in Switzerland            044 . 28 36 125 or [info@eurotops.ch](mailto:info@eurotops.ch)

in the Netherlands      026 . 37 36 333 or [info@eurotops.nl](mailto:info@eurotops.nl)

in France                    0892 . 700 470\*\* or [info@eurotops.fr](mailto:info@eurotops.fr)

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing.

Any changes in technology and equipment are reserved.

© 19.01.2016