



Raclette RAC-8021 Flex4



Instruction manual

Caution!

Please read this user's manual carefully to ensure proper use and maintenance and keep this instruction manual for future reference.

General safety instructions

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.

1. The appliance may only be used in the household and for the purpose for which it was produced.
2. Please make sure that the main voltage and current rating correspond with the power supply of the appliance.
3. Please don't touch hot surfaces. Please use handles or knobs.
4. Please use the device only on flat surfaces to prevent tip-over.
5. Do not use the appliance outdoor or close to heat sources.
6. The device may not be kept outdoors, at places with extreme temperatures or high humidity.
7. Please avoid that the power cord passes over sharp corners or edges, touches hot surfaces or comes into contact with hot parts. Please keep the unit away from curtains.
8. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
9. The use of an extension cord or similar parts is prohibited.
10. The use of additional, non recommended accessories may cause injury or deletion of all warranty claims.
11. If the supply cord is damaged, it must be replaced by a qualified person. Never use the appliance with a damaged cord or plug.
12. Please remove the plug from the wall socket:
 - in case of any malfunction,
 - in case that the appliance won't be used for longer time,
 - before cleaning.
13. Please never pull on the power cord when you remove it from the socket.
14. To protect against electrical shock, do not immerse cord, plug, or any non-removable parts of this appliance in water or other liquids.
15. Please make sure that the unit is at a distance from flammable materials, including curtains, textiles, walls , etc .
16. Let the appliance cool down before you add or remove parts.
17. After use, clean the unit according to the guidelines.
18. Make sure that your hands are dry before using the device or touch the power cord.
19. Do not leave the appliance unattended while it is used.
20. Do not touch the unit in case it falls into the water, but unplug the power cord from the outlet.
21. Let the appliance cool down before moving, transportation, maintenance and Care or storage.

Specific safety instructions

Please do not cut or scratch with sharp objects (knives, forks) in the pans. This will damage the non-stick coating.

Assembly

- (1) Baking Plate
- (2) Park Deck
- (3) „ON/OFF“-switch (I/O)
- (4) Mini pan



Before first use

1. Please remove all packaging materials.
2. Please clean the unit with a damp, soft cloth before the first use.
3. Clean the items (see Maintenance and Care)
4. Place the appliance on a flat and stable surface.
5. Please make sure that the grill rests securely in the cradle.
6. The first heating of the device creates a "new" smell. Leave the device without grilling about 10 minutes on.
7. It could cause smoke. Make sure the appliance has sufficient ventilation.

Operation

Preheating

1. Place the appliance on a flat, stable and heat resistant surface.
2. Put the plug into the power supply.
3. Turn on the unit by using the „ON/OFF“-switch (2).
4. Wait a few minutes before the set temperature is reached
5. The Appliance is now ready for use.

Baking

1. Allow the appliance to preheat (see Preheating).
2. Grease the baking plate (1) with a little oil.
3. Place the food you wish to grill on the baking plate and stone.
4. Grill the food until it is done. Turn the food over occasionally whilst it is being grilled to ensure that both sides are evenly cooked.
5. Remove the food from the baking plate and stone and place on a plate.



Spread some salt across the stone before placing your meat or fish on it.

Grill

Leave the baking plate (1) on the base when grilling food.

1. Allow the appliance to preheat (see Preheating).
2. Fill a Mini pan (3) with, for example, pieces of cheese, meat, fish or vegetables.
3. Put the filled Mini pan (3) on the bottom plate under the Baking plate(1).
4. Remove the Mini pan (3) from the appliance once the food is done, or the cheese has melted.

Maintenance and care

- Please pull the plug before cleaning and wait until the device has cooled completely.
- Make sure the appliance is unplugged before you start the cleaning.
- Clean the base with a damp cloth, if necessary moistened with a couple of drops of washing-up liquid.
- The baking plate, the stone and the trays can be cleaned in hot water with washing-up liquid; use a soft cloth or a plastic washing-up brush.
- Dry the base, stone, baking plate and the trays thoroughly.
- Clean the appliance after each use.
- Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.
- Do not immerse the appliance in water or other liquids.



The baking plate, stone and trays may also be cleaned in a dishwasher.

Note concerning protection of the environment



This product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for the recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicate such disposal procedures. The materials are recyclable in accordance with their respective symbols. By means of re-use, material recycling or any other form of recycling old appliances you are making an important contribution to the protection of our environment. Please ask your local council where your nearest disposal station is located.

As part of our extended producer responsibility, this product is indicated in accordance to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). The aim is to avoid, reduce, and environmentally friendly disposal of electronic waste. Please help actively to protect the environment and dispose electronic waste through local collection points. The packaging and this manual can be recycled.

EC Declaration of Conformity

The device meets the essential health and safety requirements of the European Union. The EC declaration of conformity is the basis for CE marking this unit.

With publication of this manual supersedes all previous their validity.

SUNTEC, SUNTEC Wellness, KLIMATRONIC and the Sun-Logo are registered trademarks. © 2015/01 SUNTEC WELLNESS GMBH

© 2015 Suntec Home Essentials RAC-8021 Flex4

SUNTEC WELLNESS GMBH / HOLZSTRASSE 2 / 40221 DÜSSELDORF / GERMANY