

## TABLE LAMP "BANKER" TOUCH SWITCH


Please read the user's manual before using the product and keep it for future reference.

### A. INSTALLATION/ REPLACEMENT OF BULB

Instructions before installing or replacing the bulb:

- The cable must be disconnected from the socket.
- Place the lamp on a flat, stable and non-slippery surface.
- If the lamp was lit before, allow the lamp and the bulb to cool for at least 10 minutes before any operation.

#### COMPATIBLE BULB

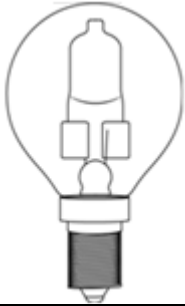

#### Halogen bulb

Characteristics:  
1 bulb of 25W maximum not included, base E27


Power :  
220-240V~  
50Hz

### B. USE OF THE LAMP


First, plug the lamp into the mains and perform the following:



Touch the base of the lamp lightly to light it (low brightness).

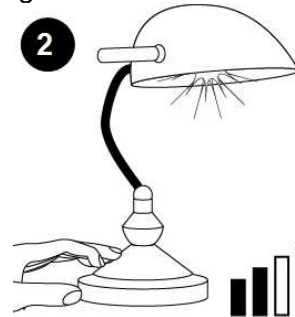

Touch the base lightly again to obtain an average brightness.

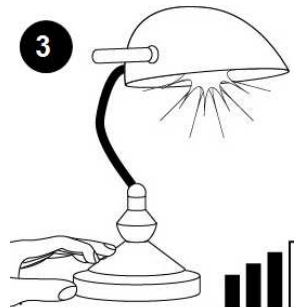

Touch the base lightly a third time for strong brightness.



To turn the lamp off, touch the base lightly again.

## C. PRECAUTIONS FOR USE

- Use the lamp indoors only.
- Before connecting the lamp to the mains, check that the voltage indicated on the rating plate matches that of your electrical installation.
- Never exceed the maximum wattage indicated for the bulb (max. 25W) and use a bulb corresponding to the type indicated in Part A: Bulb Installation / Replacement.
- Do not pull on the cord, but on the plug to disconnect the lamp.
- Do not touch the lamp and its base with wet hands.
- Do not touch the shade when it is turned on.
- Install the lamp away from moisture and away from flammable materials and heat sources.
- The lamp should be placed in a dry place, on a clean and stable surface.
- Do not attempt to open the lamp to repair it. The electrical part can only be repaired by a qualified electrician or a specialized workshop.
- Never look directly at the light source.
- The lamp is not a toy. Keep the lamp out of the reach of children and pets.
- Do not cover the lamp when it is switched on.
- Handle the product with care. A blow, a shock, or a fall, even from a low height, can damage it.
- If you do not intend to use the lamp for a long time, remove the cable from the outlet.

## D. CLEANING

- Before cleaning the lamp, unplug it and allow it to cool down for 10 minutes.
- Clean the lamp with a soft, dry, lint-free cloth.
- Avoid contact with water.
- Do not use abrasive chemicals or detergents.
- Keep the lamp away from dust, moisture and extreme temperatures.

**WARNING:** You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

**The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.**

Imported by PRODIS , 1 rue de Rome 93110 ROSNY SOUS BOIS-France

Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD

