

# CHRONOGRAPH WATCH WITH BIG NUMBER

## Cat. no.: 29480

### INSTRUCTION MANUAL



#### **I. Function Instruction:**

Display: month, day, hour, minute, second, stopwatch, selectable for 12/24 hour clock, Alarm / Hourly Chime / Snooze, EL backlight

#### **II. Operation Instructions:**

**EL backlight:** Press the D button to light up the EL backlight for 3 seconds.

#### **Stopwatch mode:**

In normal time mode, press the A button once to enter the stopwatch mode, press the B button once to start timing, press B button once again to stop timing, digital timing information will be displayed. Press the C button to reset the stopwatch to zero. Press the A button once to return to normal time mode

#### **12/24 hour display:**

In normal time mode, press the A button three times to enter the time adjustment status, press the C button twice to enter the hour adjustment status, and then press and hold the B button until 12/24 hour appears. Press the A key once to return to normal time mode.

#### **Alarm setting:**

In normal time mode, press the A button twice to enter alarm mode, hours will be flashing, press the B button to adjust the hours. Press the C button, minutes will be flashing, press the B button to adjust the minutes. Press the A button to return to normal time display.

#### **Snooze mode settings:**


When the alarm beeping, press the B button once to enter snooze mode. After 5-6 minutes, when it beeps again, press the C button to turn off the snooze mode.

### Time settings:

In normal time mode, press the A button three, seconds will be flashing, press the C button several times, minute, hour, day, month, week will be flashing in turn. Press the B button to adjust the values of them when they are flashing. Press the A button to return normal time mode.

### Alarm, hourly chime on / off:

Press and hold the C button, then press the B button to choose to turn the alarm on / off: When the alarm on, there will be an alarm symbol. Press and hold the C button, then press the A button to turn on/ off the hourly chime. All 7 day shown means it is ON, all 7 days not shown means it is OFF.

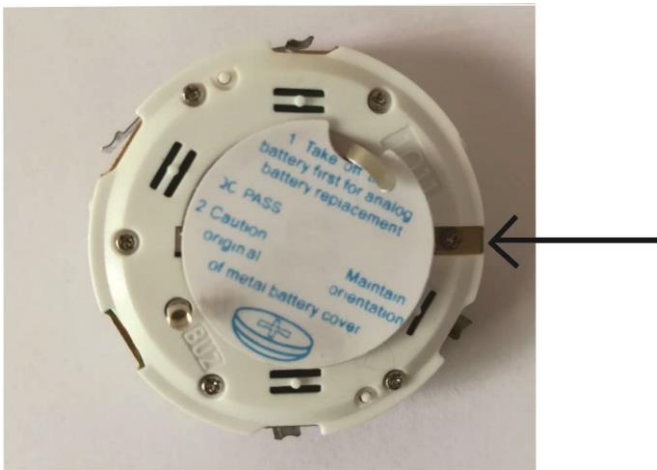

### To change the battery of the LCD display:

- 1) Remove the case back
- 2) Unscrew the screw as pointed by the arrow
- 3) Replace the old battery with new battery. Battery type is CR2016
- 4) Screw back the screw
- 5) Fix back the case back

### To change the battery of the analogue watch:

- 1) Remove the case back
- 2) Unscrew the screw as pointed by the arrow
- 3) Remove the CR2016 battery, underneath the CR2016 batter you can see the SR626SW analogue battery.
- 4) Replace the analogue battery with new battery SR626SW.
- 5) Place back the CR2016 battery and screw back.
- 6) Fix back the case back.

### DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with

domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63\* or [info@eurotops.de](mailto:info@eurotops.de)

in Austria 01 . 230 60 43 12 or [info@eurotops.at](mailto:info@eurotops.at)

in Switzerland 044 . 28 36 125 or [info@eurotops.ch](mailto:info@eurotops.ch)

in the Netherlands 026 . 37 36 333 or [info@eurotops.nl](mailto:info@eurotops.nl)

in France 0892 . 700 470\*\* or [info@eurotops.fr](mailto:info@eurotops.fr)

In Norway [tkd@eurotops.de](mailto:tkd@eurotops.de)

In Sweden [tkd@eurotops.de](mailto:tkd@eurotops.de)

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 11.05.2017