LEATHER TOPPED RECHARGEABLE HEATED SOLES

INSTRUCTIONS FOR USE

A. PRODUCT PRESENTATION

These wireless heated soles come with a rechargeable battery. A built-in heating switch is located in the sole's heel. The heating function comes on and diffuses heat on the whole sole automatically when you put them. And it will stop automatically when you turn it off.

Heating switches



Bullt-in lithium-ion batteries

Cut marks

Charging connections

B. TECHNICAL CHARACTERISTICS

Voltage: 3.7 V

Capacity: 800 mAh

Output power: 1.5 W Max.

C. HEATING TEMPERATURE AND DURATION

The heating temperature is approx. 42°C. After fully recharged, the soles keep your feet warm for three hours and more according to the outside temperature.

D. RECHARGING THE BATTERY

- The lithium-ion battery 4.5V is built-into the sole.
- Plug the charger into charging connection, the charger indicator light is red during the charging period. The indicator light becomes to green after battery charging.

E. WARNING

The soles cannot be cleaned with running water because they are electrically warmed. And they are not sealed. To clean them, simply wipe them with a damp cloth and leave to dry.

F. SIZE

Cut to match your own size from 36 to 46.

WARNING: You should not dispose of this device with your household waste.

A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD