# MULTI-PURPOSE WEED ROLLER CAT.NO.: 39072

Please take the time to read these instructions before using the item.

## **Before Initial Use:**

Before initial use, it is recommended that you soak the foam roller in a bucket of water. Press on the foam to remove any trapped air then let it soak up all the water and promptly remove from the bucket. Repeat this procedure if your Multi-Purpose Weed Roller is not used for long periods of time and/or if the foam has dried up.

#### Filling up:

Warning: Always wear protective gloves when handling chemicals and always use products in accordance with manufacturer's label instructions.

Set the adjustment knob to **0**. Pour the chemicals inside the tube (if you have a funnel, it would be easier). If concentrated chemicals are used it is preferable to prepare in a separate container before pouring into the tube. The handle can hold approximately **20** fluid ounces. Close the handle by screwing on the ergonomic handle. Make sure that the water tight gasket is correctly positioned.

#### Can be used with:

- Weed killer
- Fungicide
- Insecticide
- Sealer
- Cleaner

### To Use:

Set the adjustment knob to I (clockwise from 0 to I). Roll the unit on the area to be treated making sure the foam is soaked with the chemical at all times. If needed, adjust the spreading adjustment button to increase (turn towards I) or decrease (turn towards 0) the chemical delivery. A denser treatment may require two crossed applications.

## After using:

After using, set the adjustment knob to **0**. Collect the remaining liquid from the tube and place it in an appropriate container (if

possible use the original container). The foam roller is removable, just unscrew the nuts and remove the roller from its axis. Rinse the foam piece and the tube thoroughly with water. When putting away your Multi-Purpose Weed Roller, make sure it doesn't rest on the roller in order to prevent losing its shape.







To reassemble, follow these steps in reverse:















#### **IMPORTANT:**

Keep out of reach of children. Refer to the safety instructions and recommendations on the chemical packaging.

## **DISPOSAL**

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.

Eurotops Versand GmbH Elisabeth-Selbert-Straße 3 40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63\* or <a href="mailto:info@eurotops.de">info@eurotops.de</a>
in Austria 01 . 230 60 43 12 or <a href="mailto:info@eurotops.at">info@eurotops.at</a>
in Switzerland 044 . 28 36 125 or <a href="mailto:info@eurotops.ch">info@eurotops.ch</a>

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470\*\* or info@eurotops.fr

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 22.11.2013