


*** Before Use: First remove the plastic stopper and push the crown (C) fully into the watch**

A. PRODUCT DESCRIPTION

Solar ana-digit watch

Dual power solar and battery

- S Button: Set/Reset
- L Button: Backlight
- M Button: Mode
- D Button: Start chronograph (Chronograph mode) / scroll through values in ascending order (Time setting mode)

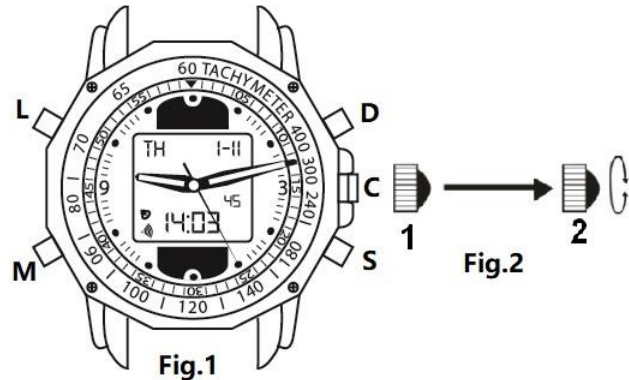

B. FEATURES

- 1 pce 3V CR2025 button cells for the LED display.
- 1 pce 1.5V SR626SW button cell for the movement.
- 1 ATM

C. USE

A. SETTING ANALOG TIME

- Pull the crown "C" to position 2 (see fig. 2) and rotate it to set the time.
- Push the crown back to position 1 (see fig. 2) to confirm and finish setting the time.

B. BUTTON FUNCTIONS

BACKLIGHT FUNCTION

- Press the "L" button once to turn on the backlight for 3 seconds in any mode.

CHRONOGRAPH FUNCTIONS

In real-time display mode:


Press button "M" once to switch to stopwatch mode. The "ST" icon displays.

Press button "D":

- Once to start the stopwatch;
- A second time to stop the stopwatch;
- A third time to continue timing.
- For a split time, press button "S".

Please note: When you select split time, the stopwatch continues timing in the background. To return to total time elapsed, press "S" button.

- To reset the stopwatch to zero, first press "D" button to stop timing and then press "S" button.

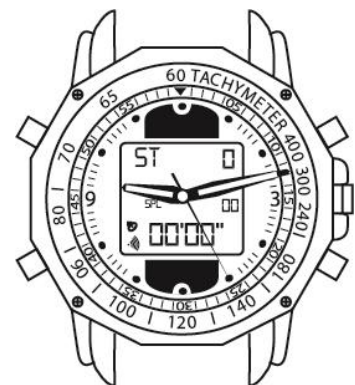

NOTE: The chronograph's display range is limited to 23 hours, 59 minutes and 59.99 seconds. When it reaches this limit, it restarts from zero.

ALARM FUNCTIONS

Activating/Deactivating the alarm and chime

In real-time display mode:

- Briefly press "M" button twice to enter alarm setting mode.
- Press "D" button once to activate the alarm. "🔔" displays.
- Press "D" button a second time to activate the chime. "🔊" displays.
- Press "D" button a third time to activate both the alarm and the chime. "🔔" and "🔊" displays.
- Press "D" button a fourth time to deactivate them. "🔔" and "🔊" will be no longer display.



In alarm mode:

- Briefly press "S" button once and the hour digit will flash, press "D" button to set the alarm's hour digit.
- Briefly press "S" button again and the minute digit will flash, press "D" button to set the alarm's minute digit.
- Press "S" button a third time to confirm the alarm's setting.
- Press "M" button to exit setting mode.

NOTE:

- When the alarm goes off, press the "S" or "D" button to stop it or press the "M" button to repeat it and "🔔" will flash, the alarm will go off after 5 mins.

SETTING THE DIGITAL DISPLAY'S DATE AND TIME

In real-time display mode:

- Press "M" button three times to enter time setting mode.
- The second digit will flash, press "D" button to reset it to zero.
- Press "S" button, the hour digit will flash, press "D" button to set the hour digit.

NOTE: The time can be displayed either in 12-hour format or in 24-hour format. In set hour digit mode, press "D" button to select 12H or 24H format (The digits "H" displays when selecting the 24h format, The digits "A" or "P" displays when selecting the 12h format).

- Press "S" button, the minute digit will flash, press "D" button to set the minute digit.
- Press "S" button, the month digit will flash, press "D" button to set the month digit.
- Press "S" button, the date digit will flash, press "D" button to set the date digit.
- Press "S" button, the days of the week display will flash, press "D" button to set the day of the week.
- Press "M" button to confirm and exit setting mode

D. WARNING

- To ensure a waterproof seal, always make sure that the crown has been pushed back into the normal operating position.
- DO NOT USE the crown or any other buttons underwater or when the watch is wet.

- To maintain the aesthetic appearance of your watch, avoid contact with perfumes, nail polish, varnish, cosmetics, cleaning products, adhesives, and paint, as they can cause discoloration, deterioration and damage.
- To prevent any risk from perspiration, dust and humidity, regularly wipe your watch with a soft, dry cloth.
- To ensure the longevity of your watch, please observe the following instructions: Do not attempt to open the watch casing. The battery must be replaced by a qualified person.
- Your watch is shock-resistant. However, to avoid damage, make sure you do not drop or hit it against hard surfaces.



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Imported by PRODIS SAS, 1 rue de Rome, 93110 Rosny-sous-Bois, France

Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD

Made in P.R.C

