

Vasco Mini

USER MANUAL

ENGLISH

 


Copyright © 2018 Vasco Electronics LLC
www.vasco-electronics.com

Table of contents

1. Operation of the device	4
1.1 Function keys	5
1.2 Battery charging	6
1.3 In-built SIM card	6
1.3.1. Top-up	6
1.3.2. SIM card expiration	6
1.3.3. SIM card number	6
1.4 First start	7
2. Vasco Mini	7
2.1. Choosing the source and target languages	7
2.2. Voice recognition	8
2.3. Pronunciation	8
2.4. History	8
3. Menu	9
3.1 Clean history	9
3.2 Account balance	9
3.3 Device settings	10
3.3.1 Networks	10
3.3.2. Device	11
3.4. About	12
4. Notification bar	12
Specification	14

1. Operation of the device

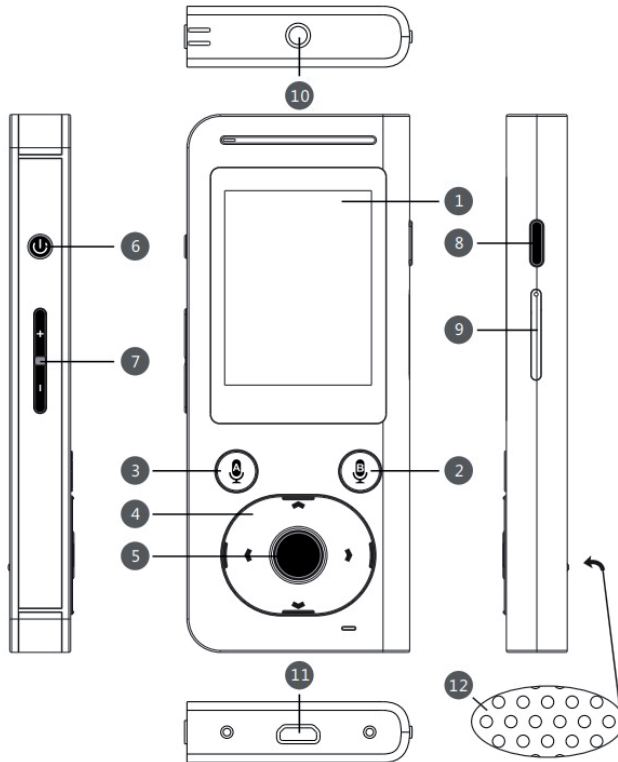


- 1.** Touchscreen, **2.** Voice recognition button B, **3.** Voice recognition button A, **4.** Arrows, **5.** Enter, **6.** Power ON/OFF, **7.** Volume Up/Down, **8.** Back, **9.** SIM card slot, **10.** Earphone input, **11.** Micro USB, **12.** Loudspeaker

1.1 Function keys

Power

- Device turned off: hold this key for 5 seconds to turn the device on.
- Working device:
 - push this key to block the screen, push again to unblock
 - push and hold the key for 2 seconds and tap “Power off” to turn the device off

Volume

- Working device: push up or down to increase or decrease the volume.
- You will see the following icon.  .

Back

The back button allow you to get back to the previous screen.

Arrows

The up/down arrow keys allow you to highlight the translated text. They also serve to select options in the settings.

The right/left arrow keys open the menu of the device.

Enter

The Enter button allows you to replay translated text. It also serves to confirm the selected option in the settings.

1.2 Battery charging

- Plug the charger into an electric socket and the USB cable into the device in order to charge the battery.
- The battery indicator moves to charging mode.
- The battery is fully charged after about 4 hours.
- After the battery is charged, remove the charger and the USB cable.

WARNING: Charge the battery in a well-ventilated area between 14°F and 95°F (-10°C to +35°C). To charge the battery use the charger provided by the manufacturer. Using any other charger may damage the device.

1.3 In-built SIM card

The device is equipped with an international SIM card that allows it to work without WiFi. The in-built SIM card is prepaid and doesn't require any contract.

1.3.1 Top-up

The SIM card is active and topped-up. In order to top up your account visit: www.vasco-sim.com or contact the seller.

1.3.2 SIM card expiration

The SIM card expires after 2 years from the last use of the device. In order to prolong this period, just use your device through a GSM network.

1.3.3 SIM card number

To display your SIM card number, press the right arrow key, select "Account balance" app and press Enter. (See chapter 3.2).

WARNING: Don't bend or scratch the SIM card. It should not have any contact with water, dust or electricity.

1.4 First start

 
After turning the device on, choose your language. Then, read and accept the terms of service. The language chosen will change all the regional settings.

You will see the main screen of Vasco Mini. The device is now ready to use.

2. Vasco Mini

 
Vasco Mini recognizes voice and translates full sentences into supported foreign languages. The translator pronounces the translated text out loud. For the full list of supported languages consult the manufacturer's website. Vasco Translator needs a WiFi or a GSM network in order to translate.

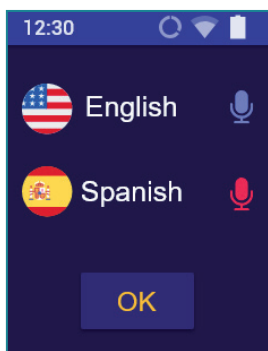

2.1 Choosing the source and target languages



Tap the flag to see the list of available languages. Swipe up or down to find the language you need. Tap the name of the language to activate it.

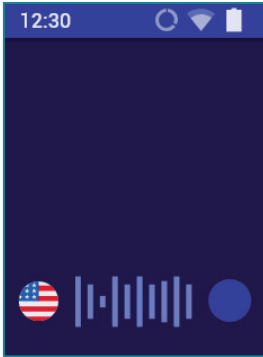2.2 Voice recognition



The  and  hardware buttons serves to enter text using the voice recognition function. In order to enter text for translation, tap and hold the key and, after hearing a beep, say what you want to translate in a clear, monotonous voice, from a distance of a foot (30 cm).

When you finish, the translation is done automatically and lasts about 2 seconds.

 
WARNING! The quality of voice recognition may worsen in a loud environment.

2.3 Pronunciation

The pronunciation starts automatically . Press Enter to listen to it again.

2.4 History

To see or clear translation history, open the application menu and tap « History ».

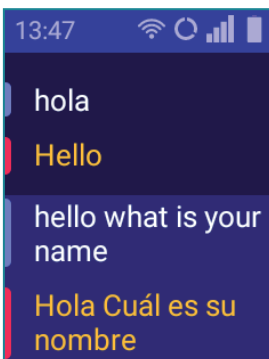

The translations appear in the main screen in chronological order. Use Up and Down arrow keys to navigate between the translated sentences.

Press Enter to playback

3 Menu

Press the right arrow key to enter the menu of the device.

Press the left arrow key to get back to the “select language” screen.

3.1 Clean history

 
Tap and hold the line for about 1 second to delete it.

To delete all the translations, go to the menu of the device by pressing right arrow, select “Clean history”, press Enter and confirm by pressing “Yes”.

3.2 Account Balance

To check your account balance:

- press the right arrow key to enter the menu
- select “Account balance” using Up and Down arrow keys and press Enter.

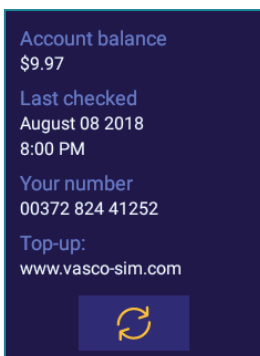

Tap “Refresh” to update account balance information.


3.3 Device Settings

Press the right arrow key, then select “Device Settings” to set up your WiFi connection, configure your SIM card or change the application language, etc.

3.3.1 Networks

WiFi configuration

Manage your WiFi networks here.

If you see “WiFi is disabled”, tap the  icon. You will see the list of available networks.

Tap the name of the network to connect to it.

Padlock – this icon means that the network is secured with a password. If you have the password, tap the name of the network and enter the password. Then, tap “OK” and use the device. If you don’t know the password, contact the network provider.

Signal – the green bars show the signal strength. The more green bars, the stronger the signal is.

Name – tap the name of the network to connect to it.

WARNING: A network without a padlock means that this network is open. You don’t need any password to connect to it. Please note, that some open networks require additional actions to be taken such as logging in or accepting its terms and conditions. It’s not possible to use such a network.

SIM configuration (for advanced users only)

Data roaming - allows you to connect to data services (It is strongly recommended to leave this option on while using GSM).

Preferred networks - In case of any connection problems, you can

change a type of the networks here.

- 4G (recommended)
- 3G
- 2G

Enhanced 4G LTE Mode - use LTE, to improve connectivity.

(It is strongly recommended to leave this option turned on.)

Access point names - it allows you to set up your APNs:

Network operators

Choose a network operator

This function allows you to connect with a chosen GSM network operator in the country you're in.

- Make sure you have a WiFi or GSM connection.
- Select "Network operators" and press Enter.
- The device will look for available GSM networks. Choose the one you saw on the list and tap its name in order to connect to it.
- The device will register in the chosen network.

Done. You can now use the device.

WARNING: If the device goes out of range of the preferred operator, it will not connect to any other network automatically. Repeat the steps and tap "Select automatically" in order to get back to the previous settings.

3.3.2 Device

Application language

Change the language of the menu.

Check for updates - If a new version of the software is available, you will see information about it after tapping “Check for updates”. In order to update the device, download and install the application, tap “OK” and reboot the device. If there are no new updates you will see “No new updates”. If you see “Device not registered”, please contact the seller.

WARNING: You need a WiFi connection in order to download system updates.

About - information about the software.

3.4 About


You can see the version of the device and read the terms and conditions.

4 Notification bar


Clock

08:50 shows current local time.

Battery status

Icon  shows the current battery status.


WiFi

Icon  shows the strength of WiFi signal.


Icon  means that the WiFi module is turned off.


GSM

Icon  shows the strength of the GSM signal.

Icon  means that the SIM card is damaged or not installed.

DATA

Icon  means that the mobile data is enabled.

Icon  means that the mobile data is disabled.

Specification

Display	TFT 240x 320 pxls, 2.0 inches touchscreen
Processor	MT6737WM
RAM	1 GB
ROM	8 GB
3G/4G Modem	Yes
Wi-Fi	2.4 GHz
Battery	1250 mAh
Size	1.84 x 4.45 x 0.50 in (46.8 x 113.2 x 12.8 mm)
Weight	0.17 lb (76g)
Earphone input	Mini Jack (3.5 mm)
USB	Micro USB



VM180808