

EP608

VINTAGE TABLETOP JUKEBOX RADIO AND MP3 PLAYER

INSTRUCTION MANUAL

Please read this instruction manual before using the device for the first time and keep it for further reference.


GENERAL SAFETY INSTRUCTIONS

- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.**

- For indoor use only.

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.**
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.**

PRODUCT DESCRIPTION

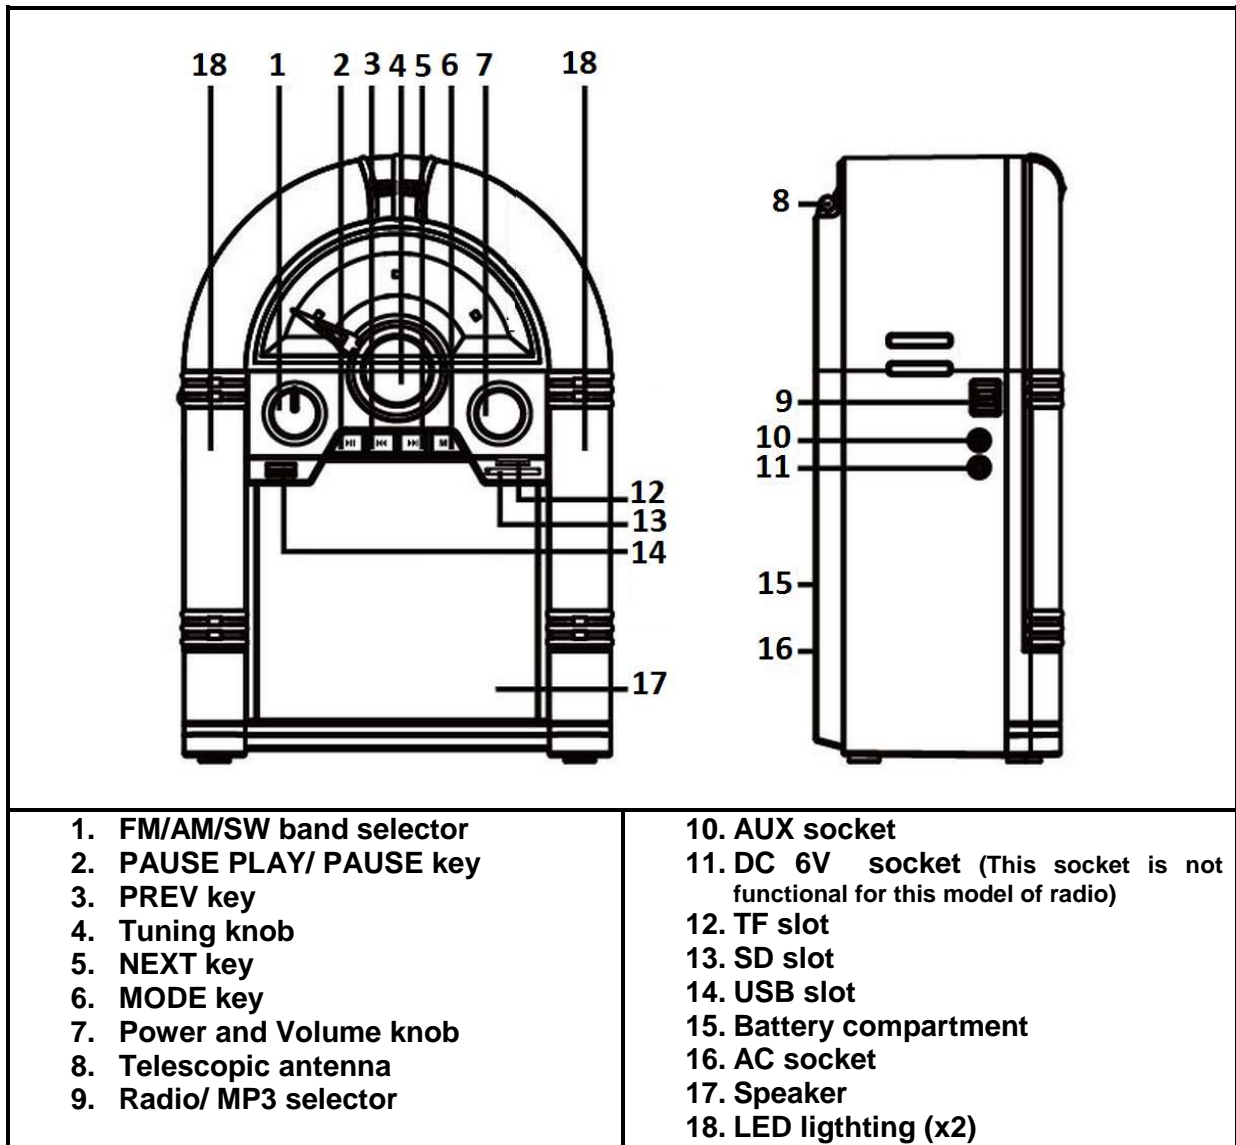

TECHNICAL SPECIFICATIONS

The radio can be operated by **2** sources of power of your choice:

- 1) By connecting the adapter cable (included) to the AC socket **(16)** ;
- 2) After inserting **4 batteries D/ LR20** (not included), 1,5V each.

Details on technical specifications

- **220-240V~ 50Hz 5W** or **4 batteries D/ LR20, 6V**
- Audio format: MP3
- Frequencies:
 - AM: 522 – 1620 KHz
 - FM: 87 – 108 MHz
 - SW1: 3.2 – 10.0 MHz
 - SW2: 10.0 – 22 MHz

OPERATION

RADIO FUNCTION

- To turn on the radio, turn the power button **(7)** which also fulfills the function as the volume knob. Then adjust it to the appropriate volume.

Note: When you turn on the radio, the LEDs are on.

- Position the RADIO/ MP3 selector **(9)** to RADIO position.
- Turn the band selector **(1)** to select the desired frequency: FM, AM or SW.
- Turn the tuning knob **(4)** to choose your station.
- Pull the telescopic antenna **(8)** out completely and adjust the angle if necessary.

Note : When receiving AM, position the radio in order to get the best reception.

- Turn the POWER knob **(7)** when you finish listening to the radio.

USB PLAYER/ SD CARD/ TF CARD

The maximum capacity of USB key, SD and TF card should be 16 GB.

- Position the RADIO/ MP3 selector **(9)** on MP3 position.
- Insert the USB key, SD or TF card into the appropriate slots.

When inserting the USB key, TF or SD card, the device automatically reads the MP3 files contained in the medium (USB, TF or SD). If you wish to listen to audio files on the USB key, TF or SD card and another medium is already inserted, you should remove it in order to read the audio files contained in the desired medium.

- Press PLAY/ PAUSE key **(2)**.
- Press PREV key **(3)** to listen to the previous song.
- Press NEXT key **(5)** to listen to the next song.

LEDS

When you turn on the radio, the LEDs turn on automatically.

To turn the LEDs off or on manually, press ON / OFF switch, on the right side of the radio: ON for ON and OFF for OFF.

WARNINGS

- Do not use the vintage tabletop jukebox radio and MP3 player other than its intended use.
- Keep away from sources of heat, direct sunlight, humidity, water and other liquids.
- Do not subject the vintage tabletop jukebox radio and MP3 player to strong shocks or do not drop it.
- Do not expose it to high temperatures.
- Do not modify, disassemble or puncture.
- If the vintage tabletop jukebox radio and MP3 player is powered with batteries and the sound becomes dim, replace the worn out batteries with new ones.
- If you intend not to use the vintage tabletop jukebox radio and MP3 for a long time, please remove the batteries.
- Do not attempt to repair. All the repairs should be carried out by a qualified technician.

WARNING ON BATTERY

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.

- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled. This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.

Imported by PRODIS SAS, 1 rue de Rome, 93110 Rosny-sous-Bois, France/ Made in the P.R.C
Marketed by EUROtops Versand GmbH, Elisabeth-Selbert-Str. 3
D-40764, LANGENFELD, GERMANY

