

EN - Manual - Pocket Lamp Set 3 in 1 – Art. No.: 44386

SET INCLUDES:

1pc Aluminium T6 led Flashlight
1pc 5W COB rotatable LED Inspection lamps head
1pc Aluminium 3W XPE flexible light head
1pc rechargeable 3.7V 2200mAh 18650 Battery,
1pc 3xAAA battery case,
1pc Battery cartridge (for 18650 battery use)
1pc USB cable, 1x USB adapter, 1x plastic box

SPECIFICATIONS:

- Flashlight head with a Bright T6 LED 450 Lumen
- Rotatable LED Inspection lamps head with a 5W COB LED 400lm
- Aluminium 3W LED flexible light head 120lm
- Extra Heavy-duty Aluminium Casing
- Power by 3*AAA batteries or Rechargeable Li-ion Battery 18650
- Shockproof & Rainproof
- 3 Beam Modes: High, Low, Strobe
- Strong magnet on the battery case bottom
- Plug-in USB Charging with indicator
- Charging time: 3 to 5 hours
- Weight: 386g



Avoid direct eye exposure or serious eye injury could result. To prevent damage to eyesight, never look into light when it is on. Do not shine in any face. This item is not a toy. Keep out of reach of children. Remove the batteries if you plan not to use the device during a long period. Do not try to repair your device. All the repairs must be made by a qualified technician. Keep away from sources of heat, direct sunlight, humidity, water or other liquids. Do not drop, short-circuit, modify, disassemble or puncture it.

CHARGING

Gently lift rubber socket cover to reveal micro USB charging input socket. Directly plug in a standard micro USB charger or the provided micro USB cable to an USB power source to charge or use the adapter for 230V plug in. A light under the switch rubber button show red when charging and green when full. Charging time takes 3 – 5 hours depending on the rating of the USB charger. Recharging is easy and safe as the battery cannot be overcharged. The charger will stop charging once full. Always make sure to replace rubber socket cover after charging to keep the flashlight splash proof.



MAINTAINANCE:

All batteries lose charge over time. It is recommended that the flashlight should be fully recharged every 2-3 months when not in use. Store the flashlight in low temperature, dry and ventilated place. If the torch gets dirty, clean it with a wet cloth. The torch is not designed for underwater use.

SAFETY INSTRUCTIONS FOR NORMAL BATTERY:

Don't mix alkaline batteries with ordinary batteries (zinc carbon) or rechargeable batteries (e.g. NiMH rechargeable batteries). Don't mix new batteries with used batteries. Do not attempt to recharge non-rechargeable batteries. Rechargeable batteries must always be recharged under the supervision of an adult. Remove used batteries to prevent leakage. Do not short-circuit the battery terminals. Always use the same batteries of the recommended or equivalent type. Insert batteries with correct polarity.

SAFETY INSTRUCTIONS RECHARGEABLE BATTERY:


The battery must be removed from the device before disposing of it. The unit must be disconnected from the power supply before you remove the battery. Never reconnect the device after removing the battery.

BATTERY INSTALLATION.

You can choose between two power options to operate the torch.

A You can use the normal battery adapter for 3x AAA Micro-Batteries (batteries are not included)

B You can use the rechargeable 18650 Li-Ion battery and the battery cartridge (included)

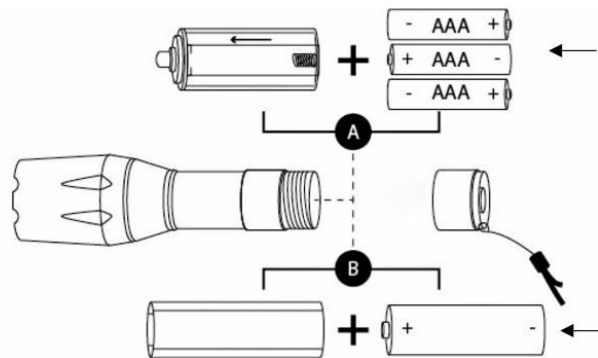

OPERATION:

Users can choose the different lighting head arbitrarily in term of different working demand. Simply screw the desired head onto the basic housing, after inserting the normal batteries or rechargeable battery.

ATTENTION!!!

The returns will be impossible if products were damaged because of incorrect use.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

EURO
Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany

EURO
tops

If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

© 18.07.2019