

Note

- If your item does not work, check the inserted batteries.
- If the item still does not work, contact the store where you purchased the item.
For this you also need the cash register receipt.

Cleaning and care

Warning!

- Turn off the product before cleaning.
- Do not use strong detergents for cleaning. There is a risk of damage.
- Use a feather duster or a microfibre cloth to clean the item.

Storage

If you are not going to use the product for a long time, remove the batteries.
Use the original packaging for storage. Store the article in a dry place at a temperature of approx. 10–25 ° C.

Warranty

The seller is responsible for the operational readiness of the goods. The seller guarantees the functionality according to the agreed technical data.

The warranty begins with the acceptance of the goods. The warranty ends after 2 years.

Exclusion of warranty: The warranty is excluded for all defects caused by improper handling.

Accessories and spare parts

The following accessories are included:

- 4 x LED Christmas tree ball
- 1 x LED tree top
- 1 x remote control with 2 AAA 1.5V alkaline batteries
- 5 x AAA alkaline 1.5V batteries
- 1 x user manual

Recycling and disposal



Old appliances must not be disposed of with household waste!

If the device can no longer be used, then every consumer is legally obliged to keep old appliances separate from household waste, for example, to hand in at a collection point of his municipality / district.

— This ensures that waste equipment is recycled properly and that negative environmental effects are avoided. Therefore, electrical appliances are marked with the symbol shown.



Batteries and rechargeable batteries are not household waste!

Every consumer is required by law to return all batteries and rechargeable batteries, whether or not they contain harmful substances *, to a collection point in their municipality / district or in commerce so that they can be disposed of in an environmentally friendly manner. Please hand in batteries and rechargeable batteries only in discharged condition!

* marked. with: Cd = cadmium, Hg = mercury, Pb = lead

BONETTI

The article corresponds to all standards required to obtain the CE mark. If necessary, request the EC declaration of conformity for this article please contact the manufacturer: E-Mail: info@innocom-gmbh.de.

Importeur:

INNOcom GmbH,
Ehnkenweg 9, 26125 Oldenburg, Germany

Made in China



Item number: 150026

GB Manual

LED christmas tree balls Set of 4 with tree top

Item-nr.: 150026

Document: BDA_150026 / Version 1.0

BONETTI



Product description

Congratulations on the purchase of your LED Christmas tree baubles with tree top. You have decided with this purchase for a beautiful, decorative home accessory. We would like to thank you for the trust placed in us and wish you much pleasure with this product.

Delivery

LED Christmas tree balls consisting of:

- 4 x LED Christmas tree ball
- 1 x LED tree top
- 1 x remote control with 2 AAA 1.5V alkaline batteries
- 5 x AAA 1.5V alkaline batteries
- 1 x user manual

Technical specifications

- Per Christmas tree ball: 1.5 V • Tree tip: 1.5 V • Diameter: 8 cm



Safety

Read and keep the operating instructions

- Please read the operating instructions carefully before using the article for the first time.
- Keep the operating instructions in a safe place.
- When passing on the article, it must be ensured that the operating instructions are also provided.

Intended Use

Do not drop the article and do not subject it to strong impact.

The article is a decoration article.

The article was developed for private use only and not for commercial use.

Use the article only as described in the instructions.

Any other use is considered inadmissible. In the course of necessary further developments, we reserve the right to change product, packaging or operating instructions at any time if necessary.

Behavior instruction

- The article is a decorative item and not a toy for children!
- Children may only use the product under the supervision of an adult.
- The article is not a lighting for the interior, but a decorative item.
- This item may not be electrically connected to another item.
- Do not operate the product near water!
- Do not use near gas or electrical apparatus, fire or open light.
- Please do not repair the item yourself, as this will void the warranty.
- Before using the product, please inspect it for damage.
- Do not attach anything to the article.
- Do not use the product in its packaging.
- Remove the batteries from the article if they are not going to be used for a long time.

General warnings about batteries

- Alkaline batteries can not be recharged.
- Rechargeable batteries should only be charged under adult supervision.
- Children are not allowed to change batteries without supervision.
- Batteries must be inserted with the correct polarity (+/–).
- Do not throw batteries into a fire or expose them to excessive heat.
- Batteries must not be swallowed!
- In order to enjoy the article for a long time, always remove batteries from an article if it is not used for a long time. Thus, they prevent the batteries from discharging and protect the item from any leakage of the battery.
- If batteries have leaked, remove them from the battery compartment using a cloth and dispose of them as intended.
- Avoid skin and eye contact with the battery acid. If you have eye contact with the battery acid, rinse your eyes with plenty of water and contact a doctor immediately.
- If the skin comes into contact with the battery acid, wash it off with plenty of soap and water.
- Please take into account that the article consume a small amount of electricity even when switched off (stand-by mode) (quiescent current). This is a normal and technically inevitable process which has nothing to do with the quality and performance of the battery or the product itself.

Symbol explanations

Symbol	Designation	Explanation
	CE Labelling	This article complies with the applicable requirements set out in the Community harmonization legislation on their attachment in accordance with EU Regulation 765/2008.
	Disposal symbol for electrical appliances	Old appliances must not be disposed of with household waste! If the device can no longer be used, then every consumer is legally obliged to keep old appliances separate from household waste, for example, to hand in at a collection point of his municipality / district. This ensures that waste equipment is recycled properly and that negative environmental effects are avoided. Therefore, electrical appliances are marked with the symbol shown.
	Disposal symbol for batteries and accumulators	Every consumer is required by law to dispose of all batteries and rechargeable batteries, whether or not they contain harmful substances *, at a collection point in his municipality / district or in commerce so that they can be disposed of in an environmentally friendly manner. Please hand in batteries and rechargeable batteries only in discharged condition! * marked with: Cd = cadmium, Hg = mercury, Pb = lead
	BellandDual	The legal fees for recycling were paid in advance by the manufacturer. The packaging should be disposed of by the end user through the thus financed waste separation (dual system).
	Protection class III	The luminaires contained are based on the protection against electric shock on the application of safety extra-low voltage (SELV). No voltages higher than SELV are generated.
	Operating instructions	Please observe the instructions in the operating instructions before putting the article into operation.
	General warning sign	Warning sign to warn of a hazard or to detect hazards within the accident prevention regulations.

First steps and commissioning of the article

Commissioning the article

- 1) Please carefully remove each ball and tree top from the box and place them on a smooth surface. Please make sure that the balls and the tree top can not fall off the smooth surface.
- 2) Assembling the battery compartment with batteries: open the battery compartment by unscrewing the ball's catch in the direction of the open.
- 3) Equip the battery compartment with a AAA alkaline battery (included) and close the lid of the ball again.
- 4) Next you also equip the battery compartment of the tree top with a AAA alkaline battery and close the battery compartment with the plastic base of the tree top by carefully screwing it to the battery compartment.
- 5) Start-up of the infrared remote control: Slide the battery compartment cover in the direction of the arrow to the rear. Insert the two enclosed AAA alkaline batteries with the correct polarity into the battery compartment and then close it again.
Note: the Christmas tree ball set with tree top can only be operated with the included infrared remote control.
- 6) Press the „ON“ button on the remote control to check the function of the Christmas tree balls and the tree top. If these shine, you have done everything right.
- 7) Find a nice, suitable place in your apartment for the Christmas tree balls and tree top and put them into operation by means of the remote control. With the string you can hang the Christmas tree balls.

If you want to remove or change the batteries of the remote control.

By slightly pressing and pushing the battery compartment cover in the direction of the arrow, the battery compartment opens. Now you can completely remove the battery compartment cover. Insert the correct batteries (1.5V AAA batteries) with the correct polarity into the battery compartment. The battery compartment can now be closed again. To check, briefly press the „ON“ button and check whether the red signal light is lit. If the signal light does not light, check the correct use of the batteries again.