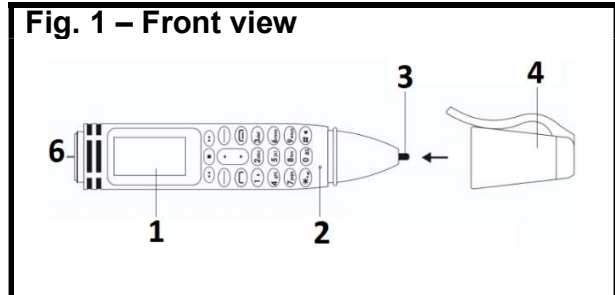 


**PEN SHAPED MOBILE PHONE  
INSTRUCTION MANUAL**


**Please read the manual before first use. Keep this manual safe for future reference!**

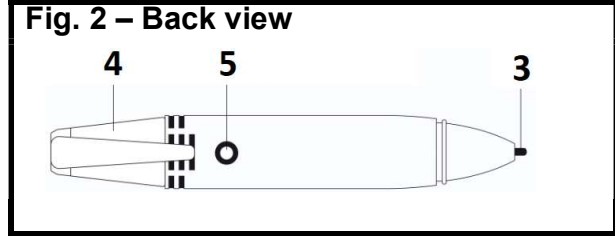**PRODUCT DESCRIPTION**



- 1 – Display screen
- 2 – Microphone
- 3 – Pen tip
- 4 – Cap
- 5 – Camera Lens
- 6 –USB charging port

**Accessory: 1 x USB charging cable (included)**



**TECHNICAL SPECIFICATIONS**

- Charging voltage: DC5V 1A
- Battery type: 1 x lithium-ion battery 3.7V, 550mAh (included)
- Radio Frequency range: 87.5-108MHz
- 

**KEYPAD**

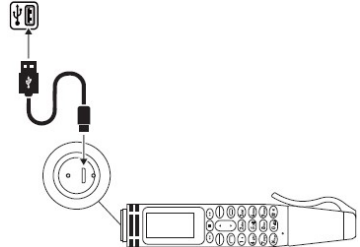
|  |   |   |
|--|---|---|
|  | <p>A – Previous</p> <p>B – Play/ Pause</p> <p>C - Next</p> <p>D – Confirm (OK)/ Menu</p> <p>E – Return/ Clear</p> <p>F – Radio Manual tune (increase)/ Torch (long press)</p> <p>G – Radio Manual tune (decrease)/ Camera (short press)</p> <p>H – Pick up (answer)</p> | <p>I – Hang up / Home screen/ Turn off (long press)</p> <p>J – Keypad</p> <p>K – “1” = (long press) Activate Recording</p> <p>L – “5” =Take photos/ videos</p> <p>M –Increase volume (MP3/Radio)</p> <p>N – Decrease volume (MP3/Radio)</p> <p>O – Turn on/ off Bluetooth on pen shaped mobile phone (long press – only works if Bluetooth is turned off on smartphone)</p> |
|--|---|---|

**BATTERY CHARGING**

**Before first use, fully charge - CHARGING TIME FOR FULL CHARGE: About 2H**


1. Use the included charging cable to connect the device to a USB port of a computer or any charging device.
2. After plugging in, the screen turns on and the battery icon showing the state of charging displays. A few seconds later, it turns off. Press any button to show the state of charging.
3. Unplug when finished charging.

Note: If the device has not been used for a long time, please fully recharge it before use.



## NANO SIM CARD AND TF CARD INSERTION

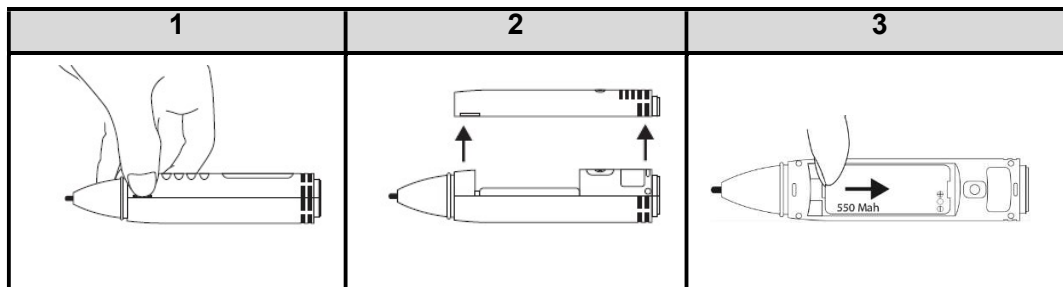
### NANO SIM CARD (not included)



Insert the tip of your finger into the notch to open the battery compartment.

Remove the cover.

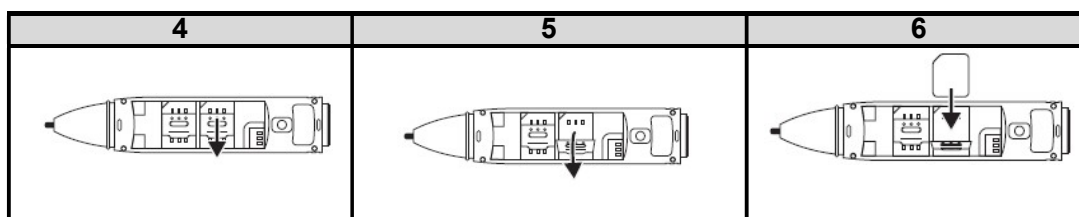
Remove the battery which hides the SIM cards' slots.



Insert the tip of your finger into the hole of the metallic element. Push downward.

Lift up to open the metallic slot and move it down.

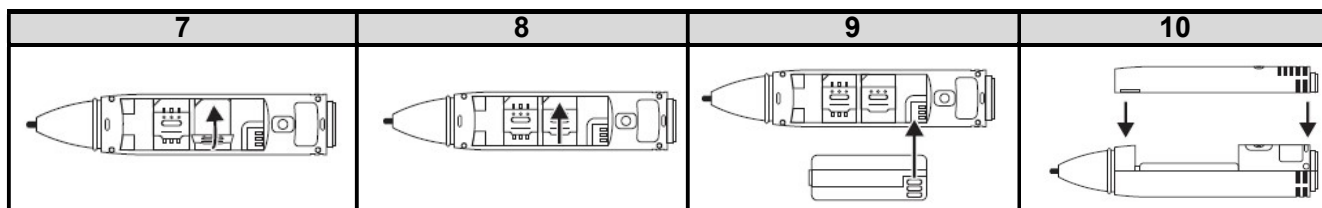Insert the SIM card with the text facing up.




Put the metallic element back to its place.

Put your finger into the notch and push upward.


Place the battery back.

Align the camera lens on the pen with that of the cover. Then, close the cover.

### TF card (not included - 32 GB max)

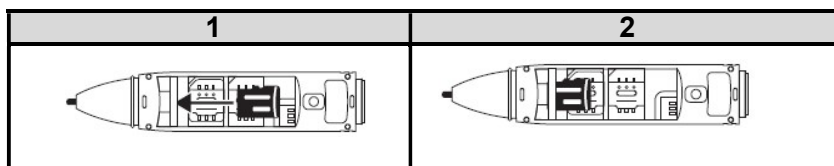

After installing the SIM card, insert TF card firmly into the metallic rectangle slot.

After insertion and after turning on the device, "Card plugged in" displays. Press  to confirm.


To operate the memory card, refer to "Menu" part, E. Multimedia


## OPERATION

### 1. TURN ON/ TURN OFF





- To turn on/ off, press and hold  button till the screen turns on/ off.

## 2. LOG IN


1. After turning on, input your pin code to log in.
2. Press  (left key) to confirm. Wait till the name of the mobile phone provider displays.

Note: If the screen turns off after a few seconds (the device enters then in standby mode), press  to turn it on.

## 3. PICK UP THE PHONE/ CALL/ HANG UP





- When the phone rings, press  to pick up the phone.
- To call, dial the number with the digit keypad in home screen mode. Press , Choose local call (from pen shaped mobile phone) or BT call (works only if bluetooth connection is successfully done and activated). Press  (left key) to confirm..
- To hang up, press .

## 4. KEYPAD LOCK/ UNLOCK

To lock/ unlock the screen, press  (left key), then press \*.

Note: Just after screen locking, the screen turns black. Press any button to turn it on.






 
## 5. CAMERA

1. To turn on the camera, press .
2. To take a photo, press « 5 » on the keypad.
3. If you want to take another photo, press  (right key) to return camera interface. Repeat step 2.
4. If you want to send or delete the photo, immediately after taking it, press  (left key) to enter camera menu. Select « 1 : Send » or « 2 Delete » and press  (left key) to confirm.

To view the photos, refer to “Menu” section, E.Multimedia/ 1.File manager or 3. Image viewer.

## 6. BLUETOOTH (name Mini BT Pen)

The signal of Bluetooth can be greatly affected by the Wi-Fi network around. Please switch off your Wi-Fi when you turn your Bluetooth on. By default, Bluetooth is automatically turned on.












1. Press and hold «0» for 3 seconds to turn on/ turn off Bluetooth (OR refer to the menu section, part G. Settings/ connectivity).
2. Activate the Bluetooth on your smartphone. Enter the menu by pressing  (left key). Use to select “BT DIALER”. Press  (left key) to confirm. Press  (left key) again to search the smartphone. Use  or  to select its name. Press  (left key) to pair it with the smartphone. Input default password: 0000 on your smartphone to connect.
3. When the pairment is done successfully, you can, pick up/ hang up/ call received the calls.

### Notes:

- To access the smartphone’s contacts, make sure that you activate the authorization on your smartphone.
- Messages cannot be sent through BT.

## 7. AUDIO PLAYER

Compatible audio format : MP3 and WAV

1. Press  to enter audio player.
2. Press  (left key) to enter "options". Choose "local list" (memory card or phone ) or "BT music" (you choose be connected via bluetooth) by pressing  or .
3. Then press  (left key) to confirm your choice.
4. If you choose local list and if MP3 or WAV files are listed, Press  or  to select desired audio file. Press  (left key) to play.
5. The audio player interface displays. Press  button to play or pause. press  or  to play the previous/ next song,
6. Press \* or # to decrease or increase the volume.
7. If you choose « BT music », you should be successfully connected via bluetooth. Refer to part 6. Bluetooth above for connexion. Open music player on your smartphone and play the song which could be heard from the phone if you are on the audio interface (refer to step 1). To operate the audio player, refer to steps 4 and 5.





Note: The Bluetooth music player will occasionally stop playing the music after a long-time work.

## 8. FLASHLIGHT





Press and hold  for 2 seconds to turn on/turn off LED light.

## MENU




 
### A. ENTERING THE MENU



1. On the home screen, press  (left key) to enter the menu.
2. Use  or  to toggle through the different menus: **phonebook, call center (call records), messaging, multimedia, organizer, settings, services and BT dialer.**
3. Stop pressing when you reach your desired option.
4. Press  to confirm.

To operate the different menus and other options/ suboptions, use the keys below:


|              | Key  | Action  |
|--------------|--|---|
| <b>PRESS</b> |  (left key)   | Enter or confirm.   |
|              |  or  | Go through the list or select menu,option or sub-option.              |
|              | Digit or letter keypad   | To dial a number, input a message or input contact name/ phone number |
|              |  (right key)  | Go back to the previous page or menu.<br>To clear.                    |

### B. PHONE BOOK MENU



1. After entering the menu and selecting phonebook menu, press  to confirm. The phone book list displays.
2. Use  or  to toggle through the list and select the desired contact.
3. Press  to confirm and display the options.

4. Use  or  to select desired option among the list : View, Send text, Call, Edit, Delete, Copy, Phonebook.

### **Phonebook's options**

1. **View** = You can see the name and phone of the contact selected. In the sub-options, you can edit, send text or call.
2. **Send text** = Use keypad to write the text. Press  to enter the list of options : « **Send to**», « Input method »: Select the format to write the text, « Insert template » : Select a message model, « Advanced » : Insert a number from phonebook and « Save ».
3. **Call** : Either choose local call (after confirming, you can call directly the number) or bluetooth call (you should be connected).
4. **Edit** : Modify, cancel or save the contact
5. **Delete** : Suppress the contact from your phonebook.
6. **Copy** : Copy contact to phone, SIM or file.
7. **Phonebook** : Copy, move contact information or delete all contacts.

### **Add a contact**

After entering the phone book menu, use  or  to select "Add new contact" at the top of the list. Select to save either on "SIM" or "Phone". Then add name/ phone number and save.

### **C. CALL RECORDS**

In this menu, you can view the recent phone call history or delete call records: missed, dialled, received, calls or view call log,

### **D. MESSAGING MENU**

The options are below:



 
 



- **Message**: Write, select the writing input format and send.
- **Inbox**: View the list of received messages sent to SIM card, select the message, reply, save to SIM 1 or reply.
- **Drafts**: Write drafts, save, send, edit or delete.
- **Outbox**: Resend, edit or delete failed messages.
- **Delete all messages in inbox, outbox or drafts**


 
 
 

 



 
 


### **E. MULTIMEDIA**

 
 
 

 
The options are below:

1. **File manager**: First select the phone or the memory card. After selecting the type of file (audio, photos, etc.) and confirming, select the options : Open, rename, delete photo/ music or video folder or create a new one.



**For options 2, 4 and 5 below, make sure that you have enough memory on your pen phone otherwise these functions could not be operated. Insert a memory card with empty space or enough memory.**

  2. **Camera**: Get access to camera to take picture. Press "5" to take photo.  
To enter the memory card, you should be on camera interface. Then, press , to enter the options. Choose « 5.Storage », select TF card (second position on the list). press  (left key) to confirm. Then take the photo by pressing « 5 ».
3. **Image viewer**: Press  or  to scroll through the pictures, select and confirm to view.
4. **Video recorder**: Before recording a video, choose the SD card as storage medium : enter multimedia menu, enter video recorder, press  (left key) to enter the options. Choose and enter « 4.Storage », select TF card (second position on the list). press  (left key) to confirm. Press « 5 » to start recording, press « 5 » again to pause/restart. Press  (right key) to save.





5. **Video player:** Enter Video player Options. Choose the storage medium where the video was saved: Phone or TF card. Press  (left key) to confirm. Press  to play/ stop. Press and hold  or  to rewind or fast forward.
6. **Audio player:** Either choose "local list" (phone or TF card) or "BT list". Press  to play/ stop the music. Press  or  to listen to previous or next audio file.  
Enter audio player Options. Choose the storage medium where the audio was saved: Phone or TF card. Press  (left key) to confirm.
7. **Sound recorder:** Enter options'list, select « 1 :New record », press  (left key) to pause or (right key) to save.
8. **FM radio:** Select option 3: "Auto search" to perform an auto scan. When the scan is finished, the displayed radio frequency is on. Then select option 1: "Channel list", then use  or  to select the scanned radio frequency. Then press  (left key) twice to confirm. Note: The maximum allocated radio frequencies after scanning is 30 but it depends on the local available frequencies when you perform the scan.  
In option "2.Manual input", then "edit", clear the former radio frequency, input a new one manually. For example for 96.8, use the keypad and press  to input the dot between "96" and "8". Then, save.

To operate the radio, press  to play/ stop the radio. Press  or  to listen to previous or next radio frequency available. Press  or  to manual tune.

## F. ORGANIZER

- Magic voice : This function allows you to change your voice to sound like the one of a male, female or child during calls. Select « none » to keep your voice. Note : This function only works when the SIM card is inserted into the pen mobile phone. A call by bluetooth has no magic voice.
- Calendar : View the current date (only if the date is set – refer to « 7. Settings » menu).
- Alarm : 5 alarms in total can be set. Use  or  to select desired position of alarm in the list. Input the alarm time and save. Then activate/ deactivate it, select alarm occurrence (once, everyday, etc.) and choose alarm tone on each alarm
- Incoming call flashlight : If this function is activated, the flashlight turns on when the phone is ringing.
- Torch : Turn on/ off.

## G. SETTINGS

    - Profiles: General/ silent/ Meeting or Outdoor mode
- Phone settings: Time and date : Press  or  to select. The item selected should be in blue. Input date and time. Then save. / language menu/ Input method for message/ Display (wall paper –auto lock screen– Date and time display)/ Flight or normal mode/ « Misc. Setting » : Brightness = Use  or  to set backlight. Then confirm./ Picture quality = ON or OFF.
- Security settings: SiM security (Pin lock/ change pin)/ Phone lock or unlock/ Change password lock
- Connectivity: Bluetooth activation/ deactivation/ Visibility : ON/ OFF -the smartphone can be searched. only if it is disconnected)/ Bluetooth name : Mini BT pen (it can be modified)/ Anti lost settings ( Activate ot to avoid the pen shaped phone to be lost. When it is over 10 meters far away from the paired device, it will ring.)
- Restore settings: enter default password : 1234 to restore the factory settings.


## H. SERVICES

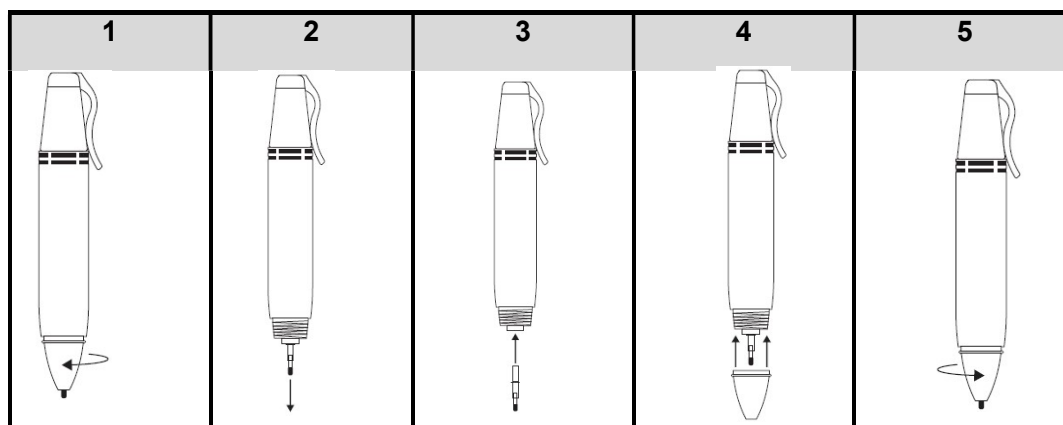This menu is only operational if your SIM card supports STK function.

### I. BT DIALER

1. Search new devices around. Activate Bluetooth function and pair with new Bluetooth device selected.
2. Select the name of Bluetooth device. You can either disconnect, delete or view help options.

## REFILL CHANGE



## WARNINGS

1. Keep away from sources of heat, direct sunlight, humidity, water or other liquids.
2. Do not operate it under high temperature.
3. Do not immerse in water or any other liquids.
4. Do not subject it to strong impacts and do not throw it.
5. Do not drop, short-circuit, modify, disassemble or puncture it.
6. It is not a toy. Keep out of reach of children and persons with reduced physical, sensory or mental capabilities.
7. In case of abnormalities (bulge, heat, etc.) during charging, disconnect USB connector, stop using it and take it to a qualified technician.
8. Do not try to repair the device. All the repairs must be made by a qualified technician.
9. Disconnect it from USB connector after completion charge.
10. To prevent possible hearing damage, do not listen at high volume levels for long periods.
11. Do not use your mobile phone while driving.
12. Switch off your mobile phone near medical apparatus.
13. At full volume, extended use of the mobile audio player could damage the user's ears



## SAFE INSTRUCTIONS FOR BATTERY

### ATTENTION

- Lithium-ion batteries can easily rupture, ignite, or explode when exposed to high temperatures, or direct sunlight.
- Do not disassemble or modify the battery. The battery contains safety and protection devices, which, if damaged, may cause the battery to generate heat, explode or ignite.
- The battery should not be removed until it is not completely discharged.
- The battery must be removed from the appliance before it is scrapped.
- The battery must be disposed safely.
- Remove the battery before disposing of the product (Refer to part: "Nano Sim/ TF card insertion" (see steps from 1 to 3).



## MAINTENANCE

- Clean only with a dry cloth.
- It is important that no liquid reaches the inside of the unit.

**STORAGE:** Store the product in low temperature, dry and ventilated place.



**WARNING:** You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled. This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.



Imported by EML – Trading name: Prodis 1 rue de Rome 93110 Rosny-sous-Bois-France/ Made in PRC  
Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD