Fire Resistant and Water Resistant Document Bag

Instruction Manual – Art. No. 50129

The Fire Resistant Document Bag is perfect for keeping deeds, titles, passports, birth certificates, insurance details, cash, valuables and precious photographs, anything you cherish are completely safe from the ravages and utter destruction caused by fire.

Features:

1. Fire & Water Resistant: The new upgraded 3 layer silicone coated fiberglass with aluminum foil inside makes the bag withstand high temperature up to 550°C and have a good water resistant performance.

2.Large Storage Space: Multiple pockets and plenty of storage space-two folder layers, 4 passport/cash pockets, 16 credit card slots, 4 key/USB flash drive pockets and 6 large mesh bags for easy storage and carrying. There is also the largest space for A4 files, computers, legal-size documents, etc.

3. Zipper Closure & With Lock: Fireproof zipper closure, you don't need to worry your valuable items fall out of the bag. It is equipped with a lock to provide additional protection, easy and convenient to use.

4. Reinforced Handle: The bag with handle design, portable and lightweight, easy to take anywhere. Comfortable hand feel, convenient and durable.

5. Wide Application: Suitable for home, office, car, box, storage cabinet use. It can also be used for business trip or traveling.


Notice:

- 1. Please keep away from little children.
- 2. Do not wash in the machine, use a damp cloth for cleaning.
- 3. This is a high quality fire resistant bag that will support high temperature and fire exposure, but as with any fire resistant object it will not support endless fire exposure so please do your best to keep any fire exposure to a minimum
- 4. This fireresistant bag is a barrier to protect your documents and cash from fire damage. But the best way to protect everything is still keep them from fire.

Numerical code setting:

The factory set number is 0-0-0, to set your personal combination, follow these steps:

- 1. Put the dials into factory setting 0-0-0.
- 2. Press down the reset button (a) with a pointed tool until hear the "click" sound.
- 3. Set your personal combination by turning the dials (b), for example 8-8-8.
- 4. Push the button (c) towards to the direction of arrow and the reset button (a) will be back when you hear the "click" sound.
- 5. Now your new personal combination is set.
- 6. **Important note**: Remember well your new personal combination. There is no other way to change it again, if you don't know your last number setting. In case you like to change again, follow steps 1 to 5, starting with last number setting.

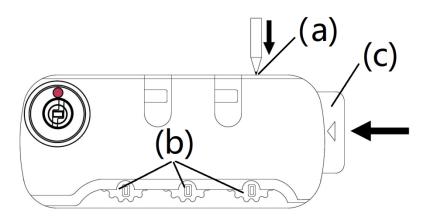

WARNING: If the cylinder is opened, please pay attention to lock it again by turning it to the red dot position by the direction of the arrow(Any tool which can be inserted in the cylinder is ok.)



ATTENTION!!!

The returns will be impossible if products were damaged because of incorrect use.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.

Eurotops Versand GmbH Elisabeth-Selbert-Straße 3 40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany	0180 . 530 63 63	B* or info@eurotops.de
in Austria	0800 321768****	or info@eurotops.at
in Switzerland	071/27 4 68 06	or info@eurotops.ch
in the Netherlands	020262 1958	or info@eurotops.nl
in France	0892 . 700 470*	* or info@eurotops.fr
in Belgium	070 663 665***	or info@eurotops.be

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**35 Cents/minute via French landline

***30 Cents/minute via Belgium landline

***freephone number within Austria

A possible return of products should be addressed to the return address stated on your invoice.

© 01.01.2023 Only for private use and for the use described.